

## Directions for Use

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Important!  
Return your  
Warranty  
Registration Card  
within 10 days.  
See why inside.



### **Read this manual first!**

*Congratulations on purchasing this Philips product.  
We've included everything you need to get started.  
If you have any problems, Philips Representatives can  
help you get the most from your new product by explaining:*

- Hookups,
- First Time Setup, and
- Feature Operation.

*Do not attempt to return this product to the store.*

**For fast help, call us first!**

**1-800-531-0039**

*Thank you for making Philips a part of your home!*

*Let's make things better.*



**PHILIPS**

**Return your Warranty Registration Card today to ensure you receive all the benefits you're entitled to.**




**Congratulations on your purchase, and welcome to the “family!” To get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**


***Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.***

<b>Warranty Verification</b>	<b>Owner Confirmation</b>	<b>Model Registration</b>
Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.	Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.	Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these  
**safety** symbols



 This “bolt of lightning” indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**


**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

**ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

**PHILIPS** Visit our World Wide Web Site at <http://www.philips.com>


# IMPORTANT SAFETY INSTRUCTIONS

## Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org)
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
  - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
  - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

**Note to the CATV system installer:**  
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### Example of Antenna Grounding as per NEC - National Electric Code

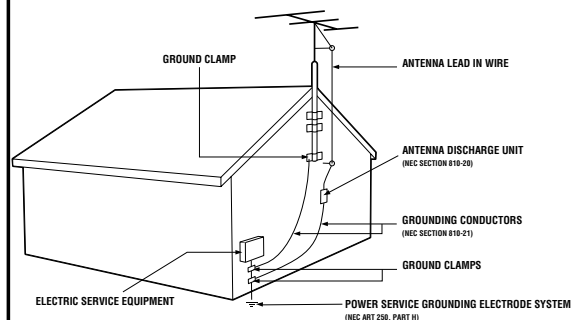

# I

## BASIC CABLE AND ANTENNA CONNECTIONS

**Y**our home's signal input might come from a single (75 ohm) round cable, a Converter Box or from an antenna. In either case the connection to the TV is very easy.

**If your Cable TV signal or Antenna signal is a round cable (75 ohm) then you're ready to connect to the TV.**

**If your antenna has flat twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300 to 75 ohm adapter.**

**If you have a Cable Converter Box:** Connect the Cable TV signal to the Cable Signal IN(put) plug on the Converter.


- 2** **Connect the Cable TV cable or Antenna cable (or 300 to 75 ohm adapter) to the 75Ω plug on the TV.**
- If you have a Cable Converter Box:** Connect the OUT(put) plug from the Converter to the 75Ω plug on the TV.

### HELPFUL HINT


Be sure to set the TV for the type signal you've connected (see the "Tuner Mode" section of this manual.)

To set the TV to select only the channel numbers in your area see how to "Program" or "Add" channels in the TV's memory, see the Auto Program section of this manual.

### Antenna Connection

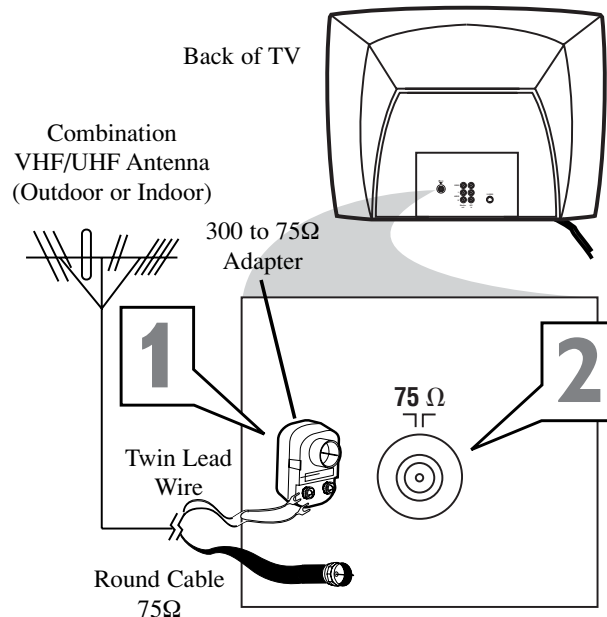

### Cable/Cable Box Connection

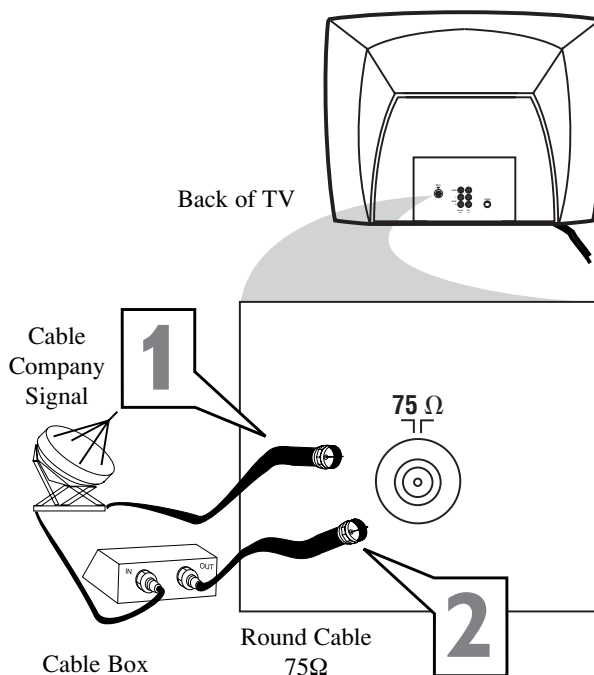

## 2

## BASIC TV AND REMOTE OPERATION

**1 Press the POWER button** to turn the TV ON.

Note: You can also press any button on the front of the TV to turn the TV ON.

**2 Press the VOLUME + button** to increase the sound level, **or the VOLUME – button** to lower the sound level.

Pressing both buttons at the same time will display the on-screen menu. Once in the menu, use these button to make adjustments or selections.

**3 Press the CHANNEL UP ▲ or DOWN ▼ button** to select TV channels.

### REMOTE CONTROL


**4 Point the remote control** toward the remote sensor window on the TV when operating the TV with the remote.

*To load the supplied batteries into the remote:*

**1. Remove the battery compartment lid** on the back of the remote.

**2. Place the batteries (2-AA) in the remote.** Be sure the (+) and (-) ends of the batteries line up correctly (inside of case is marked.)

**3. Reattach the battery lid.**

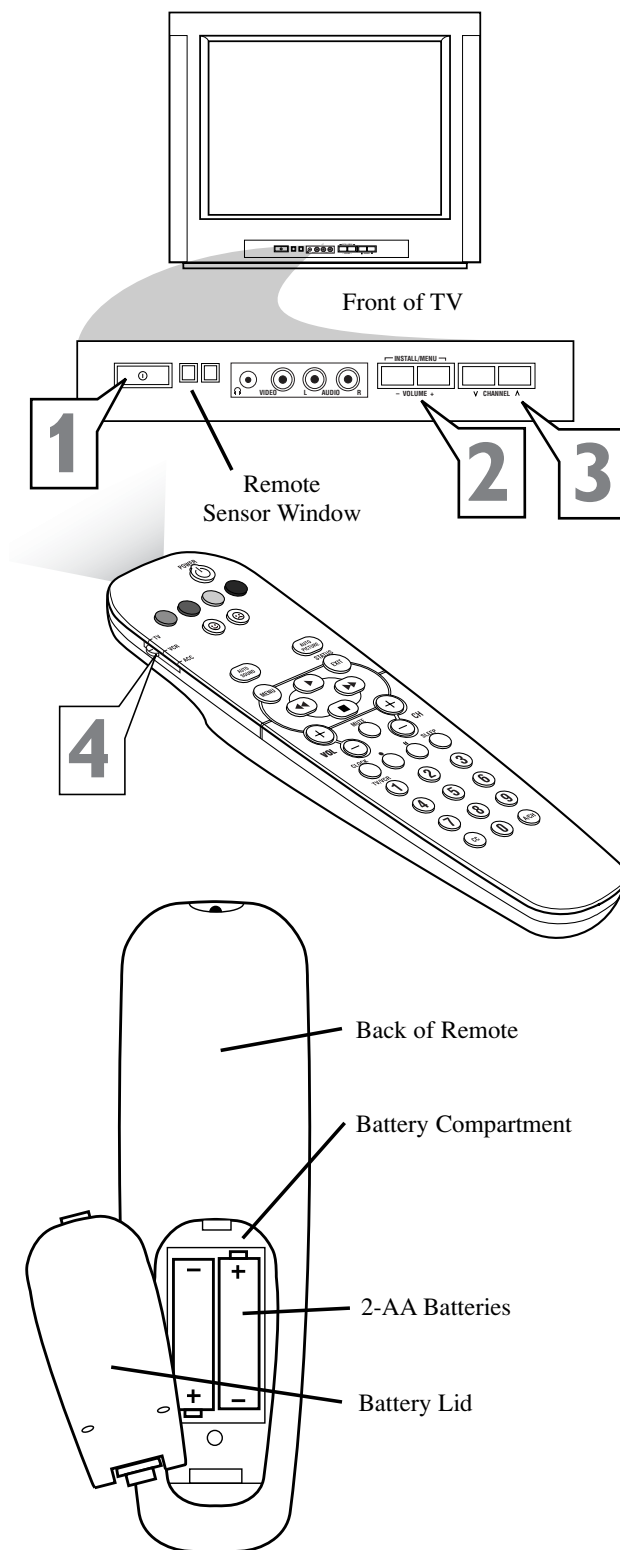

# 3


## AVI AUDIO/VIDEO INPUT CONNECTION

*The TV's audio/video input jacks are for direct picture and sound connections between the TV and a VCR (or similar device) that has audio/video output jacks. Follow the easy steps below to connect an accessory device to the AV 1 Input Jacks located on the back of the TV.*

- 1** Connect the **VIDEO (yellow)** cable to the VIDEO AV1 in jack on the back of the TV.
- 2** Connect the **AUDIO (red and white)** cables to the AUDIO (left and right) AV1 in jacks on the rear of the TV.
- 3** Connect the **VIDEO (yellow)** cable to the VIDEO OUT jack on the back of the VCR.
- 4** Connect the **AUDIO (red and white)** cables to the AUDIO (left and right) OUT jacks on the rear of the VCR.
- 5** Turn the VCR (accessory device) and the TV ON.
- 6** Press the **CH + or -** button on the remote control to select the AV1 channel. AV1 will appear in the upper left corner on the TV screen.
- 7** With the VCR (or accessory device) ON and a prerecorded tape (CD, DVD, etc.) inserted, **press the PLAY button** to view the tape on the television.

### HELPFUL HINT

All the AV channels can be selected by pressing the Channel + or - buttons. The AV channels can also be added to the QuadraSurf™ buttons for quick access.

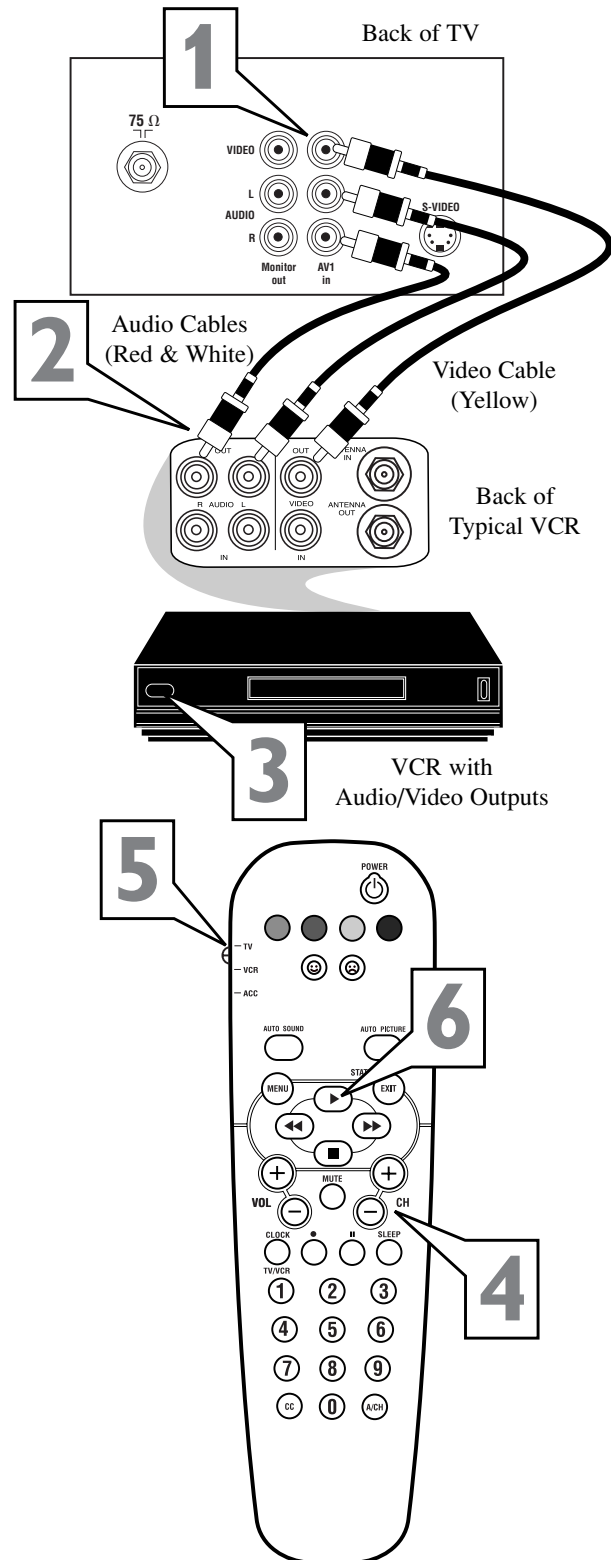

# 4

## FRONT AUDIO/VIDEO INPUT CONNECTION

*The TV also has Audio/Video Input Jacks located on the front of the TV cabinet for easy and quick connections that might not be permanent. This type of connection might be useful for the playback of a tape from a camera or a video gaming device. Follow the easy steps below to connect an accessory device to the Front Input Jacks.*

**1** Connect the **VIDEO (yellow)** cable to the VIDEO in jack on the front of the TV.

**2** Connect the **AUDIO (red and white)** cables to the AUDIO (left and right) in jacks on the front of the TV.


**3** Connect the **VIDEO (yellow)** cable to the VIDEO OUT jack on the back of the camera (or accessory device).

**4** Connect the **AUDIO (red and white)** cables to the AUDIO (left and right) OUT jacks on the rear of the camera (or accessory device).

**5** Turn the camera (or accessory device) and the TV ON.

**6** Press the **CH +** or **-** button on the remote control to select the **FRONT** channel. **FRONT** will appear in the upper left corner on the TV screen.

**7** With the camera (or accessory device) ON and a prerecorded tape (CD, DVD, Game Card, etc., depending on type of accessory device) inserted, **press the PLAY button** to view the tape on the television.

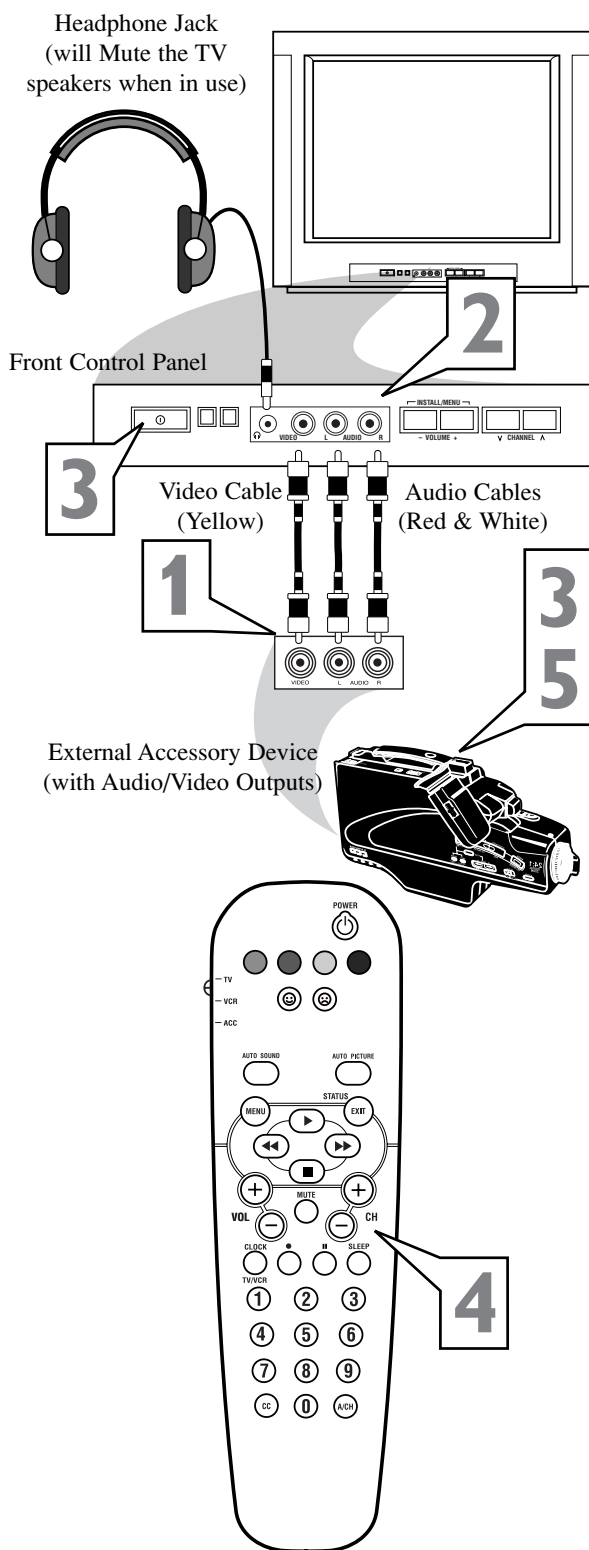

# 5

## S-VIDEO INPUT CONNECTION

*The S(uper)-Video connection on the rear of the TV can provide you with better picture detail and clarity for the playback of accessory sources such as DBS (digital broadcast satellite), DVD (digital video discs), video games, and S-VHS VCR (video cassette recorder) tapes than the normal antenna picture connections.*

**NOTE:** The accessory device must have an S-VIDEO OUT(put) jack in order for you to complete the connection on this page.

**1** Connect one end of the S-VIDEO CABLE to the S-VIDEO jack on the back of the TV. Then connect one end the AUDIO (red and white) CABLES to the AV1 in AUDIO L and R(left and right) jacks on the rear of the TV.


**2** Connect other end of the S-VIDEO CABLE to the S-VHS (S-Video) OUT jack on the back of the VCR. Then connect the other ends of the AUDIO (red and white) CABLES to the AUDIO (left and right) OUT jacks on the rear of the VCR.

**3** Turn the VCR and the TV ON.

**4** Press the CH + or – buttons on the remote to scroll the channels until SVHS appears in the upper left corner of the TV screen.

**5** Slide the TV/VCR/ACC switch to the VCR position.

**6** Now your ready to place a prerecorded video tape in the VCR and press the PLAY ► button.

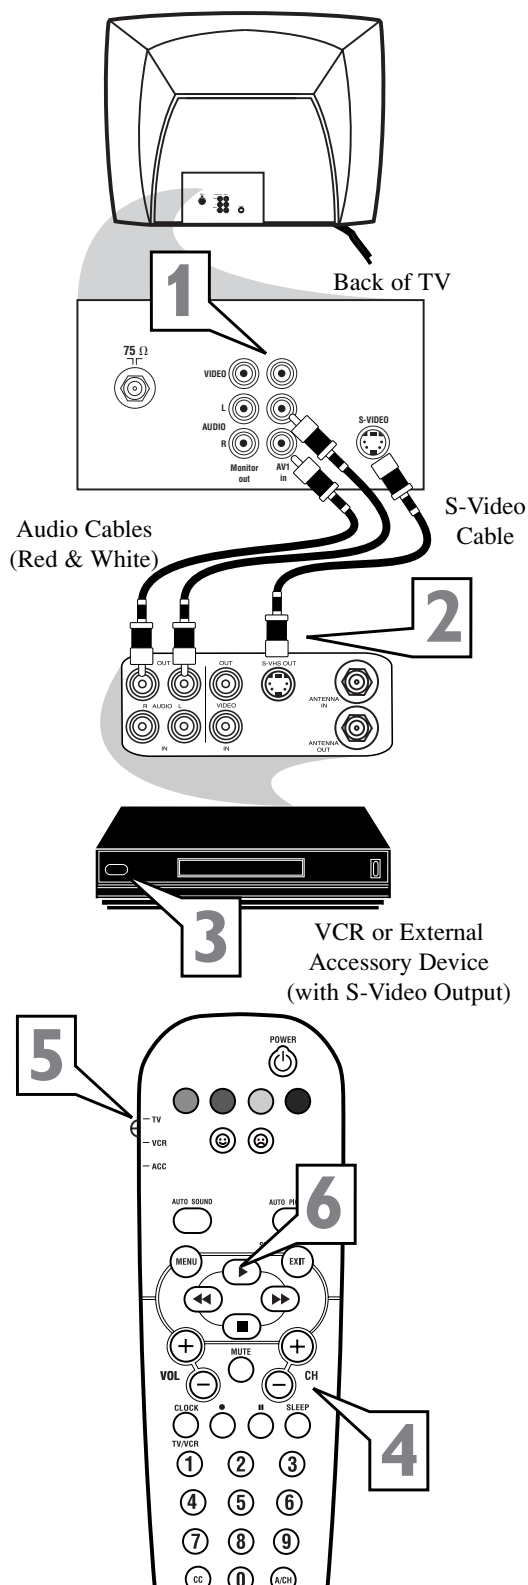



# 6

## MONITOR OUTPUT CONNECTIONS

*The Audio/Video (Monitor) Output jacks are great for recording with a VCR or used to connect an external audio system for better sound reproduction.*

### AUDIO SYSTEM CONNECTION:

**1** Connect one end of the **R(ight) and L(eft) AUDIO (Monitor Out)** jacks on the TV to the R and L audio input jacks on your amplifier or sound system. Set the audio system's volume to a normal listening level.

**2** Turn the TV and audio system ON. You can now adjust the sound level coming from the audio system with the **VOLUME (+) or (-)** button on the TV or remote control.

### SECOND VCR CONNECTION:

**NOTE:** Refer to panel number 3 for the proper hookup of the first VCR. Follow the instructions on how to tune to the AV 1 channel to view a pre-recorded tape.


The following steps allow you to connect a second VCR to record the program while your watching it.

**3** Connect one end of the **yellow Video Cable** to the Monitor Out VIDEO plug. Connect the other end to the VIDEO IN plug on the second VCR.


**4** Connect one end of the **red and white Audio cable** from the Monitor Out AUDIO L and R plugs on the TV to the AUDIO IN plugs on the VCR.

**5** Turn the **Second VCR ON**, insert a black VHS tape and it's ready to record what's being viewed on the TV screen.

### AUDIO SYSTEM CONNECTION:

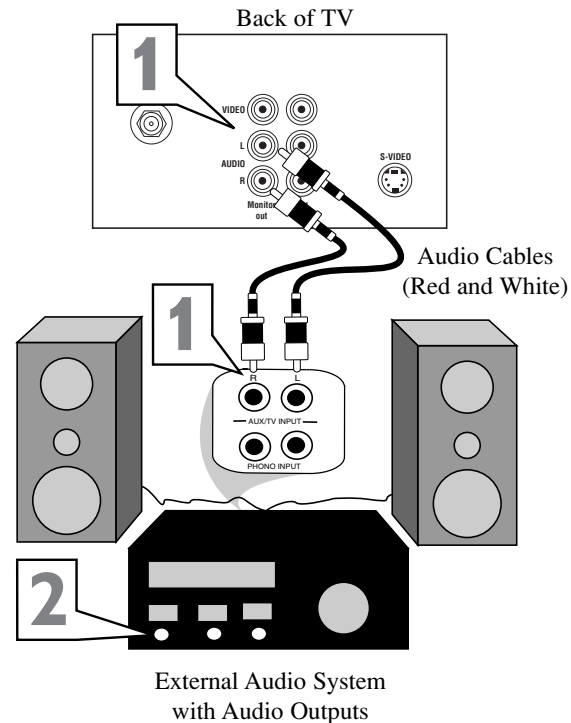

### SECOND VCR CONNECTION:

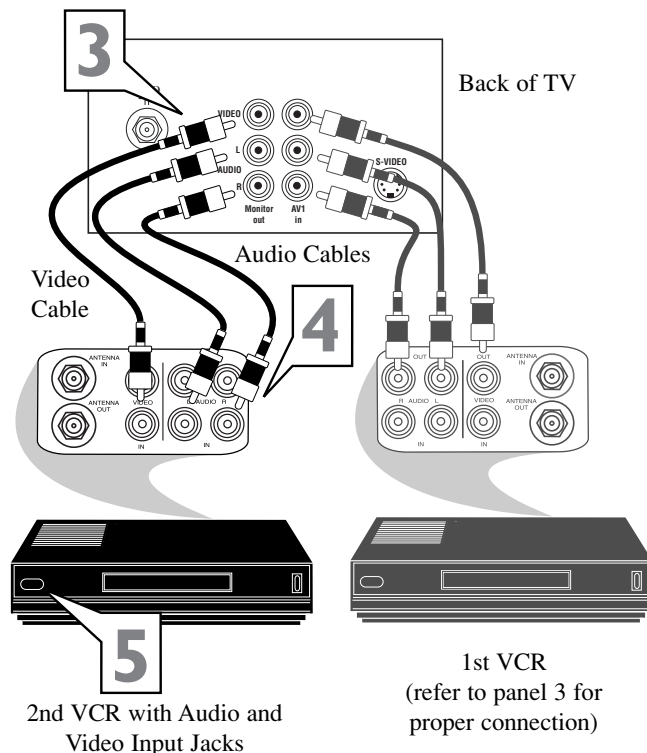

**1 - QUADRA SURF Buttons** - (Red, Green, Yellow, Blue) Allows you to store and surf up to 10 channels for each colored button.

**2 - TV/VCR/ACC MODE SWITCH** - Slide to position of TV to control TV functions, VCR to control VCR functions and ACC for Cable Converter, DBS, DVD, etc., functions.

**3 - SMILEY Button** - Press to add channels in the "Quadra Surf" lists. Works with all colored buttons.

**4 - AUTO SOUND Button** - Press repeatedly to choose from different factory pre-defined sound settings. Choose from Personal (how you set the Sound Menu options), Voice (for programming with speaking only), Music (for musical type programs such as concerts), or Theatre (used when watching movies).

**5 - MENU Button** - Press to display the on-screen menu. Also can be used to back out of the on-screen menu until it disappears from the TV's screen.

**6 - MUTE Button** - Press the mute button to eliminate the sound being heard from the TV. "MUTE" will be displayed on the TV's screen. Press again to restore the TV's volume to it's previous level.

**7 - VOL(ume) + or - Buttons** - Press the VOL + button to increase the TV's sound level. Press the VOL - button to decrease the TV's sound level.

**8 - CLOCK(TV/VCR) Button** - Press to display the "Timer" menu when in the TV mode. Within this menu set the time, set the TV to tune to a certain channel at a certain time once, or daily. When in the VCR Mode, press to toggle between VCR viewing and TV viewing.

**9 - • (VCR RECORD) Button** - Press to start a VCR recording of a TV program.

**10 - CC Button** - Press to activate the Closed Captioning options. Repeatedly press the CC button will scroll the options available on the TV screen.

**11 - POWER button** - Press the Power button to turn the TV on or off.

**12 - FROWNIE Button** - Allows you to delete stored channels within the "Quadra Surf" lists for the colored buttons.

**13 - AUTO PICTURE Button** - Press repeatedly to choose from 5 different factory pre-defined picture settings. Choose from Personal (how you set the Picture Menu adjustment controls), Movies (when watching movies), Sports (for any sporting event), Weak Signal (used when the signal being received is not the best), or Multi Media (for use with video gaming).

**14 - STATUS/EXIT Button** - Press to display the current channel number. If the on-screen menu is displayed, press the Status/Exit button will remove it from the TV's screen.

**15 - CURSOR ^, v, <, or > Buttons** - Press to navigate, select and adjust controls within the on-screen menu.


**16 - CH(annel) + or - Buttons** - Press to select channels in ascending or descending order.

**17 - SLEEP Button** - Press the Sleep button to set the TV to automatically turn itself off after a set period of time. Press repeatedly to select 15, 30, 45, 60, 90, 120, 180, or 240 minutes.

**18 - II (VCR PAUSE) Button** - Press to pause the viewing of a prerecorded video. The picture will freeze on the screen until the Play or Pause buttons are pressed again.

**19 - NUMBERED (0-9) Buttons** - Press the numbered buttons to select TV channels or to enter certain values within the on-screen menu. For single channel entries, press the numbered button for the channel you desire. the TV will pause for a second or two before changing to the chosen channel.

**20 - A/CH Button - (Alternate Channel)** Press to toggle between the last view channel and the channel presently being viewed.

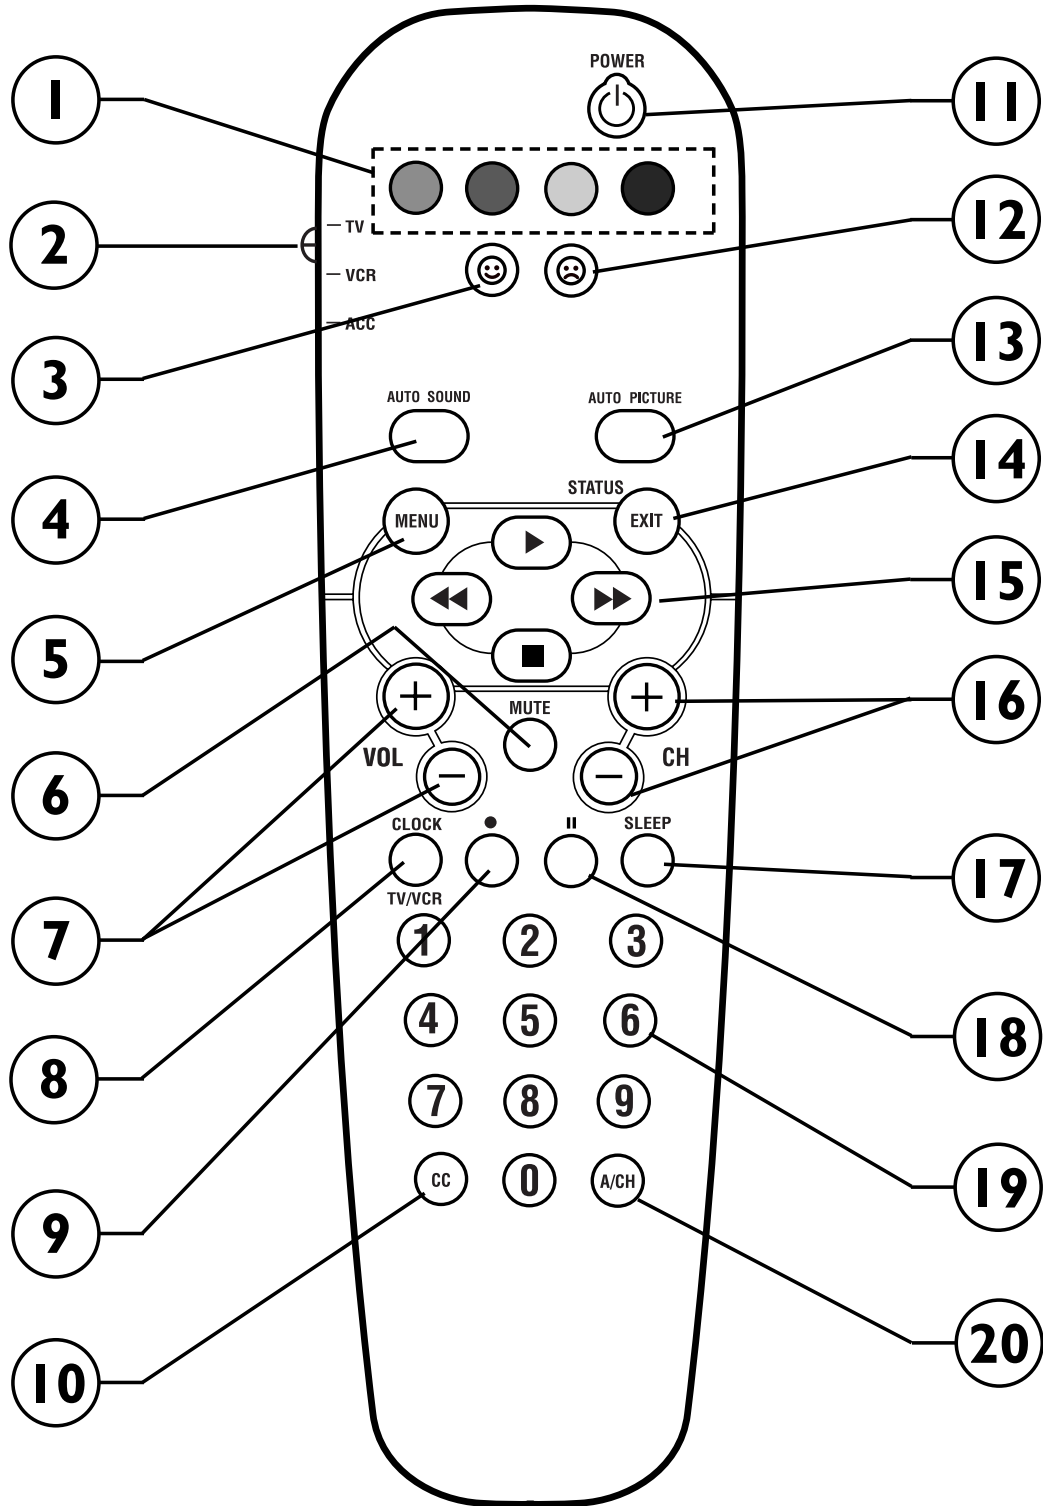

# 9

## HOW TO NAVIGATE THE ONSCREEN MENU

*Features for your television can be adjusted from within a MENU shown on the TV's screen. A MENU is nothing more than an onscreen list of features. Some of the features have sub-menus but each MENU item can be adjusted or activated (deactivated) by viewing the screen and simply pressing the proper button.*

**1 Press the MENU button** on the remote control to show the onscreen menu.

**2 Press the CURSOR UP or DOWN buttons** on the remote to pick any of the onscreen menus.


**3 Press the CURSOR RIGHT button** on the remote control show the selected menu's controls.

**4 Press the CURSOR UP or DOWN buttons** on the remote to pick any of the displayed controls.


**5 Press the CURSOR RIGHT or CURSOR LEFT button** on the remote control to make selections or adjustments to the selected controls.

**6 Press the STATUS/EXIT button** on the remote to clear the menu from the screen after an adjustment.


You can also just wait a few seconds after you finish the feature adjustment and the menu will disappear from the screen automatically.

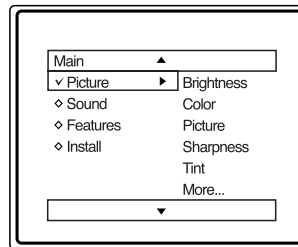


Picture Menu

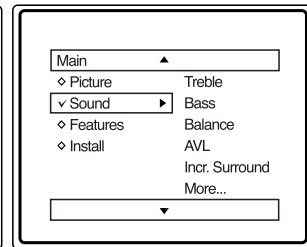


Sound Menu

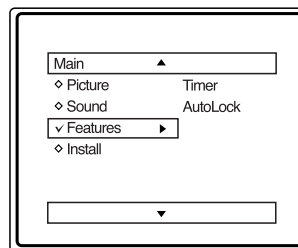

Features Menu

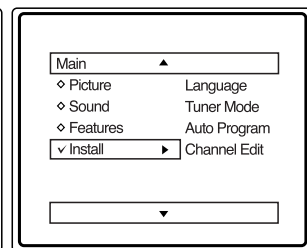

Install Menu

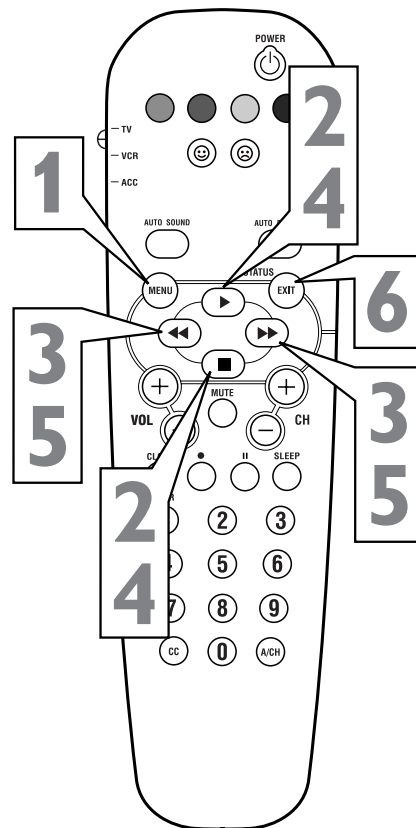

## THE INSTALL MENU CONTROLS

**Y**our TV has several control to help with the first-time setup. These controls are found within the **INSTALL** onscreen sub menu.

**LANGUAGE CONTROL** - For our Spanish speaking TV owners an onscreen LANGUAGE Control is present. This control can set the TV's onscreen menu to be shown in either English or Spanish.

## 2 TUNER MODE CONTROL -


This control changes the TV's signal input to either ANTENNA, CABLE or AUTO mode. In the AUTO mode, when the AUTO PROGRAM feature is activated, the TV will automatically choose the correct mode.

### 3 **AUTOPROGRAM CONTROL -**

Your TV can automatically set itself for local area (or Cable TV) channels. This makes it easy for you to select only the TV stations in your area when the CHANNEL (+), (-) buttons are pressed. Make sure the antenna or cable signal connection has been completed before **AUTO PROGRAM** is activated.

#### 4 CHANNEL EDIT CONTROL -

Allows you to ADD or DELETE specific channels to the TV's memory.

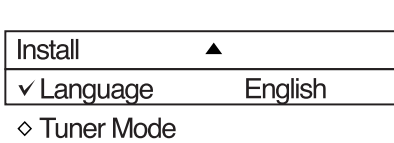

Install ▲

✓ Language English

- ◇ Tuner Mode
- ◇ Auto Program
- ◇ Channel Edit

▼

✓ Language English  
or Español

✓ Tuner Mode	Antenna or Cable or Auto
--------------	--------------------------------

[illegible]

Channel Edit ▲	
✓ Program No.	12
◇ Skipped	


Channel Edit ▲	
◇ Program No.	
✓ Skipped	On or Off



## THE PICTURE MENU CONTROLS

To adjust your TV picture controls, select a channel and use the Picture Menu Controls listed below:

- 1 BRIGHTNESS CONTROL -** Press the ► or ◀ buttons until darkest parts of the picture are as bright as you prefer.
- 2 COLOR CONTROL -** Press the ► or ◀ buttons to add or eliminate color.
- 3 PICTURE CONTROL -** Press the ► or ◀ buttons until lightest parts of the picture show good detail.
- 4 SHARPNESS CONTROL -** Press the ► or ◀ buttons to improve detail in the picture.
- 5 TINT CONTROL -** Press the ► or ◀ buttons to obtain natural skin tones.
- 6 COLOR TEMP CONTROL -** Press the ► or ◀ buttons to select NORMAL, COOL, or WARM picture preferences. (NORMAL will keep the whites, white; COOL will make the whites, bluish; and WARM will make the whites, reddish.)
- 7 DNR CONTROL -** Press the ► or ◀ buttons to toggle the Dynamic Noise Reduction Control ON or OFF. This control can clear up a picture that sometimes appears slightly “speckled” (or signal noise shown in the picture).
- 8 CONTRAST + CONTROL -** Press the ► or ◀ buttons to toggle the control On or OFF. The Contrast + control helps to “sharpen” the picture quality. The black portions of the picture become richer in darkness and the whites become brighter.

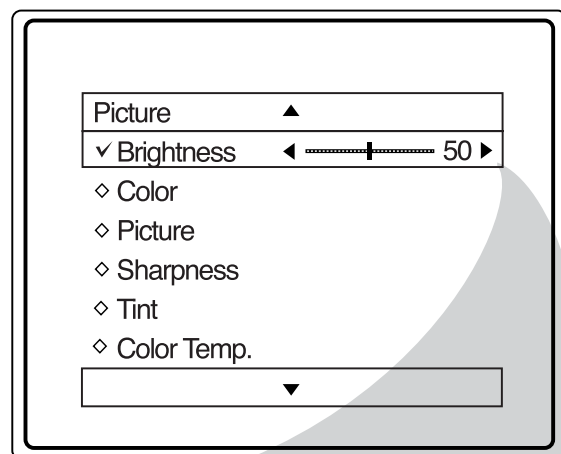

✓ Brightness ◀ ———+——— 65 ▶

✓ Color ◀ ———+——— 50 ▶

✓ Picture ◀ ———+——— 50 ▶

✓ Sharpness ◀ ———+——— 50 ▶

✓ Tint ◀ ———+——— 0 ▶

✓ Color Temp. Normal

Warm  
or  
Cool

✓ DNR On

Off

✓ Contrast + On

Off

To adjust your TV sound, select and use the Sound Menu Controls listed below:

### 1 TREBLE BOOST CONTROL -

Press the ► or ◀ buttons to toggle this control ON or OFF. The TREBLE BOOST Control enhances the high frequencies.

### 2 BASS BOOST CONTROL -

Press the ► or ◀ buttons to toggle this control ON or OFF. The BASS BOOST Control enhances the low frequencies.


### 3 BALANCE CONTROL - Press the ► or ◀ buttons to adjust the sound level between the right and left speakers.

### 4 AVL CONTROL - Press the ► or ◀ buttons to toggle this control ON or OFF. TV sound level will remain more consistent during program changes or commercial breaks.

### 5 INCREDIBLE SURROUND CONTROL - Press the ► or ◀ buttons to toggle this control to Stereo or Incredible Surr. (or if mono select Mono or Spatial). Incredible Surround will add greater depth and dimension to the TV sound.

### 6 SAP CONTROL - Press the ► or ◀ buttons to toggle the SAP control ON or OFF. SAP is short for Secondary Audio Programming and sent as a third audio channel, a SAP signal can be heard apart from the current TV program sound.

### 7 SOUND CONTROL - Press the ► or ◀ buttons to toggle this control from Stereo to Mono. Your TV can detect a stereo signal and will set itself automatically so stereo sound can be heard. However, there may be occasions when you might want to set the TV to mono.

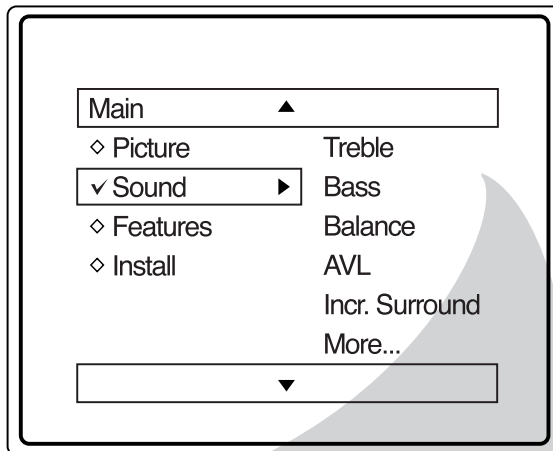

✓ Treble ◀ ———+———— 50 ▶

✓ Bass ◀ L ———+———— R ▶

✓ Balance ◀ ———+———— 0 ▶

✓ AVL On  
or Off

✓ Incr. Surround Spatial  
(if in Mono)

✓ Incr. Surround Incr. Surround  
(if in Stereo)

✓ SAP On  
or Off

✓ Sound Mono  
or Stereo

*The Timer controls allow you to use your TV as an alarm clock if set to turn itself on and off at a specific time. It also can be set to tune to a specific channel at a specific time.*

**1 TIME CONTROL** - Enter the current time with the numbered buttons. Use the Cursor Right ► button to move to the AM/PM area and use the Cursor Left ◀ or Right ► buttons to toggle AM/PM.

**2 START TIME CONTROL** - Use the numbered buttons to enter a start-up time for the TV to turn on or to tune a specific channel.

**3 STOP TIME CONTROL** - Use the numbered buttons to enter a time for the TV to shut itself off.

**4 CHANNEL NO. CONTROL** - Use the numbered buttons to select a specific channel for the TV to tune to at the specific Start Time.

**5 ACTIVATE CONTROL** - Press the ► or ◀ buttons to toggle ONCE or DAILY. Sets the Timer to preform it's function ONCE or DAILY.

**6 DISPLAY CONTROL** - Press the ► or ◀ buttons to toggle ON or OFF. When ON, the time will be displayed ALL the time the TV is on. If OFF is selected, the time will only appear when the STATUS /EXIT button is pressed.

Timer	▲
✓ Time	10 :30 AM
◇ Start Time	
◇ Stop Time	
◇ Channel	
◇ Activate	
◇ Display	
	▼

✓ Time	10 :30 AM
--------	-----------

✓ Start Time	12 :30 PM
--------------	-----------

✓ Stop Time	1 :30 PM
-------------	----------

✓ Channel	10
-----------	----

✓ Activate	Once or Daily
------------	------------------

✓ Display	On or OFF
-----------	--------------



*The AutoLock™ feature is an integrated circuit that receives and processes data sent by broadcasters, or other program providers, that contain program content advisories. When programmed by the viewer, a TV with AutoLock™ can respond to the content advisories and block program content that may be found objectionable (such as offensive language, violence, sexual situations, etc.). This is a great feature to censor the type of viewing children may watch.*

**AutoLock™ offers various BLOCKING controls from which to choose:**

**Access Code** - An Access Code must be set to prevent children from unblocking questionable or censored programming set by their parents.

**Channel Block** - After an access code has been programmed, you can block individual channels including the A/V inputs.

**Clear All** - Allows you clear all channels being blocked from your viewing set with the Channel Block Control.

**Block All** - Allows you to block ALL channels and A/V inputs at one time.

**Movie Ratings** - Certain blocking options exist which will block programming based on ratings patterned by the Motion Pictures Association of America.

**TV Ratings** - Just like the Movie Ratings, programs can be blocked from viewing using standard TV ratings set by TV broadcasters.

**MOVIE RATINGS**

**G: General Audience** - All ages admitted. Most parents would find this program suitable for all ages.

**PG: Parental Guidance Suggested** - This programming contains material that parents may find unsuitable for younger children.

**PG-13: Parents Strongly Cautioned** - This programming contains material that parents may find unsuitable for children under the age of 13.

**MOVIE RATINGS Continued**

**R: Restricted** - This is programming is specifically designed for adults. Anyone under the age of 17 should only view this programming with an accompanying parent or adult guardian.

**NC-17: No one under the age of 17 will be admitted.** - This type of programming should be viewed by adults only.

**X: Adults Only** - This type of programming contains one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, very coarse and intensely suggestive language.

**TV RATINGS**

**TV-Y** -- Designed for a very young audience, including children ages 2-6.

**TV-Y7** --It may be appropriate for children age 7 and above who have acquired the development skills needed to distinguish between make-believe and reality.

**TV-G** -- Suitable for most audiences, this type of programming contains little or no violence, no strong language, and little or no sexual dialogue or situations.

**TV-PG** -- This program contains material that parents may find unsuitable for younger children. Could contain Moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

**TV-14** -- This program contains some material that many parents would find unsuitable for children under 14 years of age. This type of programming contains one or more of the following: intense violence (V), intense sexual situations (S), strong coarse language (L), or intensely suggestive dialogue (D).

**TV-MA** -- This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. This type of programming contains one or more of the following: graphic violence (V), explicit sexual situations (S), or crude indecent language (L).



# 15 CREATING AN ACCESS CODE FOR AUTOLOCK™

Over the next few panels you'll learn how to block channels and get a better understanding of the rating terms for certain programming.

First, let's start by learning how to set a personal access code:

- 1 Press the **MENU** button on the remote to display the on-screen menu.
  - 2 Press the **CURSOR UP** or **DOWN** button until the word **FEATURES** is highlighted.
  - 3 Press the **CURSOR RIGHT** button to display the **FEATURES** menu options.
  - 4 Press the **CURSOR UP** or **DOWN** button until the words **AUTOLOCK™** are highlighted.
  - 5 Press the **CURSOR RIGHT** button. The screen will read, "ACCESS CODE - - - -."
  - 6 Using the **NUMBERED** buttons, enter 0, 7, 1, 1. "XXXX" appears on the Access Code screen as you press the numbered buttons.
- "INCORRECT CODE" will appear on the screen, and you will need to enter 0, 7, 1, 1 again.
- 7 The screen will ask you to enter a "New Code." Enter a "new" 4 digit code using the **NUMBERED** buttons. The screen will then ask you to **CONFIRM** the code you just entered. Enter your new code again. "XXXX" will appear when you enter your new code and then display the AutoLock™ menu options.

Proceed to the next panel to learn more...

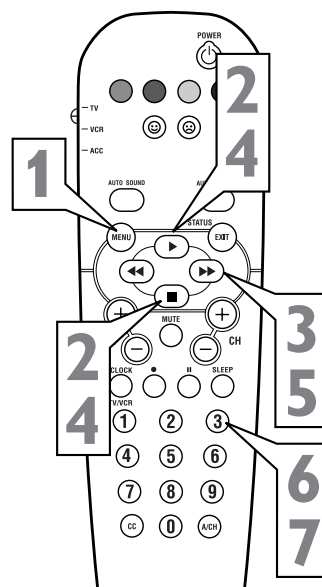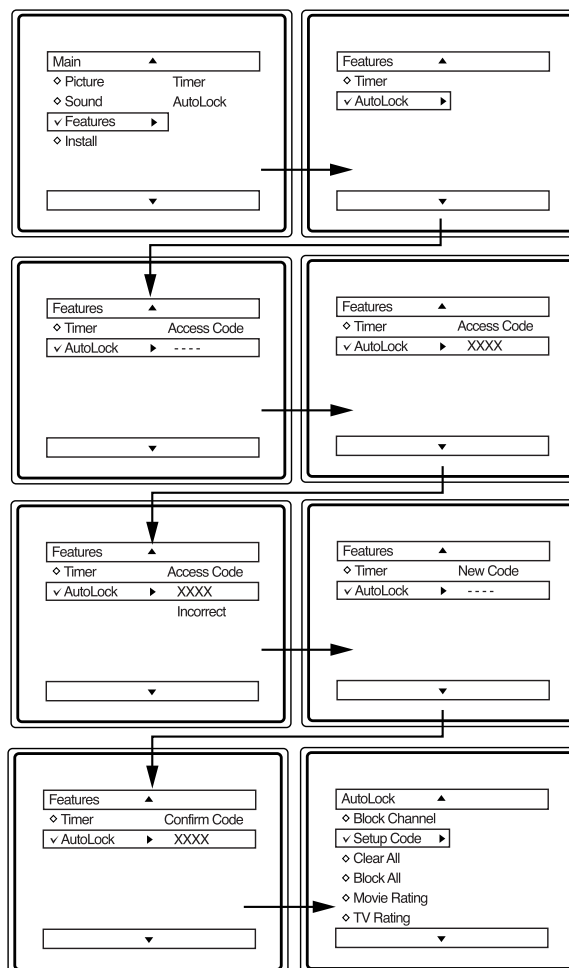




# 16

## How to BLOCK CHANNELS WITH AutoLock™

**A**fter your personal access code has been set (see previous page), you are now ready to select the channels or the A/V Inputs you want to block out or censor.

Once you've entered your access code and the AutoLock™ features are displayed on the screen:


**1** Press the **CURSOR UP**  or **DOWN**  buttons until the words **BLOCK CHANNELS** are highlighted.

**2** Press the **CURSOR RIGHT**  button to turn blocking ON or OFF for that channel. When ON is selected the channel will be blocked.


**3** Press the **CH +** or **-** button to select other channels you wish to block. Repeat step 9 to block the new channel.

**4** When finished, press the **STATUS/EXIT** button to remove the menu from the screen.


**NOTE:** If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

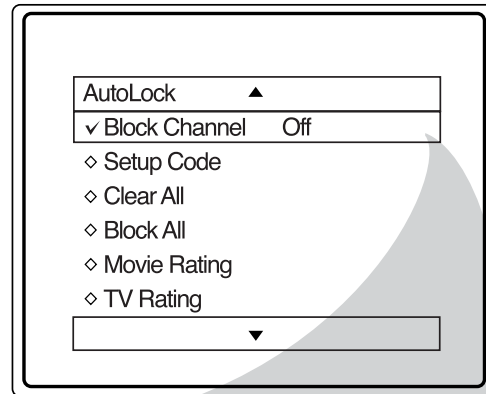

✓ Block Channel On

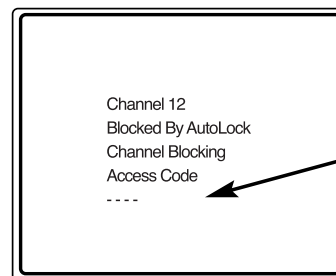

Enter your Access Code to view a tuned channel that is blocked with Block Channel.

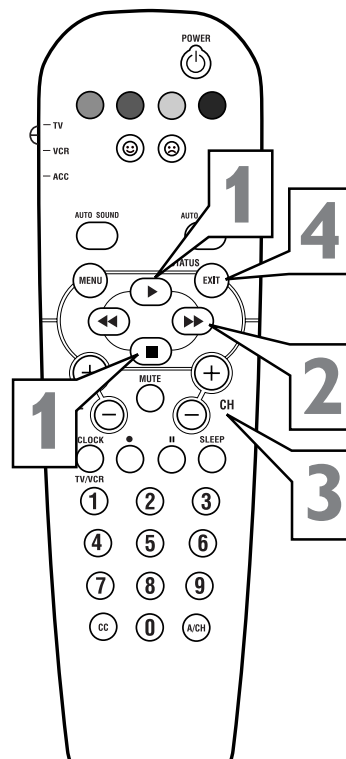

**A**fter blocking specific channels there may come a time when you want to block or clear all the channels at the same time.

Once you've entered your access code and the AutoLock™ features are displayed on the screen:


**Press the CURSOR UP ► or DOWN ▼ buttons** to select either CLEAR ALL or BLOCK ALL.

**2** If CLEAR ALL is selected, press the CURSOR RIGHT ►► button to clear all blocked channels. All channels will be viewable.


If BLOCK ALL is selected Press the CURSOR RIGHT ►► button to turn the control ON or OFF. When ON is selected, ALL available channels will be blocked from viewing.

**3** When finished, press the STATUS/EXIT button to remove the menu from the screen.


**NOTE:** If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

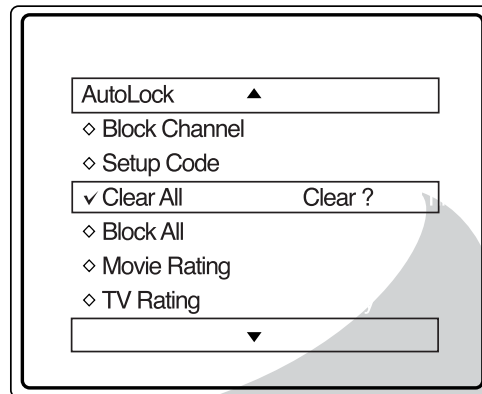

✓ Clear All      Cleared

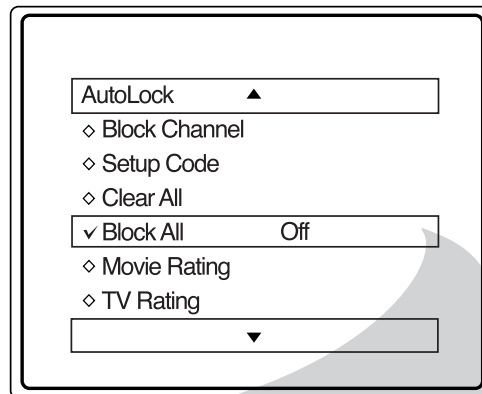

✓ Block All      On

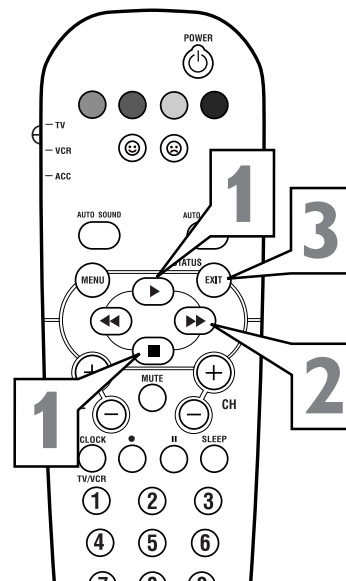

# 18

## BLOCK PROGRAMS BASED ON MOVIE RATINGS

*The AutoLock™ feature can block programming based on the Movie Industry ratings.*

*Once you've entered your access code and the AutoLock™ features are displayed on the screen:*

**1 Press the CURSOR UP ► or DOWN ▼ button** to highlight the words **MOVIE RATING**.




**2 Press the CURSOR RIGHT ►► button** to display the **MOVIE RATING** options (G, PG, PG-13, R, NC17, or X).

**3 Press the CURSOR UP ► or DOWN ▼ button** to highlight any of the Movie Rating options. When highlighted, all these options can be turned **ON** (which will allow blocking) or **OFF** (which will allow viewing).

**4 Use the CURSOR RIGHT ►► button** on the remote to turn the rating option **ON** or **OFF**.

When a rating level is chosen to be blocked, any higher level rating will also be blocked from viewing. (i.e.: If "R" is selected to be blocked, NC-17 and X will automatically be blocked.)

**NOTE:** If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

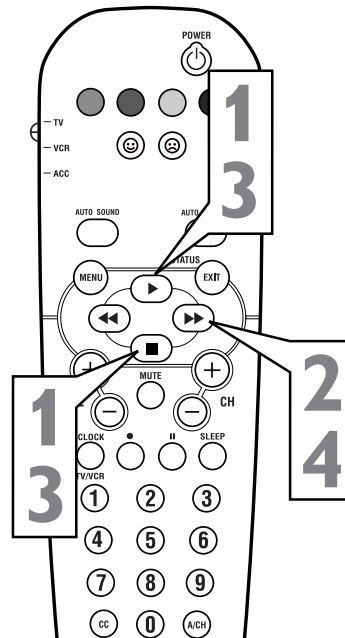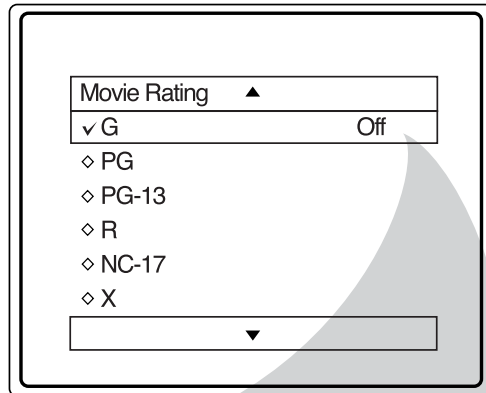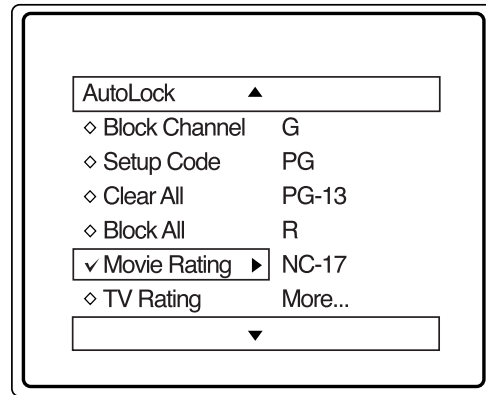


*The AutoLock™ feature can block programming based on the TV Industry ratings.*

*Once you've entered your access code and the AutoLock™ features are displayed on the screen:*

- 1** Press the **CURSOR UP** ► or **DOWN** ■ button to highlight the words TV RATING.
- 2** Press the **CURSOR RIGHT** ►► button to display the TV RATING options (TV-Y, TV-Y7, TV-G, TV-PG, TV-14, or TV-MA).
- 3** Press the **CURSOR UP** ► or **DOWN** ■ button to highlight any of the TV Rating options. When highlighted, all these options can be turned **ON** (which will allow blocking) or **OFF** (which will allow viewing).

**NOTE:** Some TV RATING options also have sub-ratings. The ratings of TV-Y7, TV-PG, TV-14, TV-MA can be customized to block V (violence), FV (fantasy violence), S (sexual situations), L (coarse language), or D (suggestive dialogue).

- 4** Press the **CURSOR RIGHT** ►► button on the remote to turn the TV-Y or TV-G rating ON or OFF. Or, press the **CURSOR RIGHT** ►► button to enter the sub-menus for the TV-Y7, TV-PG, TV-14 or TV-MA ratings.
- 5** If the TV-Y7, TV-PG, TV-14 or TV-MA sub-menu is accessed, press the **CURSOR UP** ► or **CURSOR DOWN** ■ button to select one of the options (Block All, V, S, L, D, or FV).
- 6** Press the **CURSOR RIGHT** ►► button on the remote to turn the option ON or OFF.

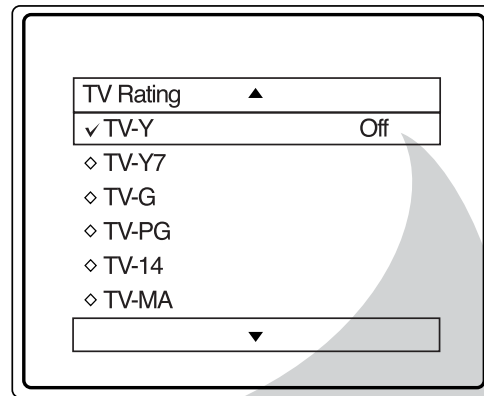

✓ TV-Y On


✓ TV-Y7 ► Block All, FV

✓ TV-G Off

✓ TV-PG ► Block All, V, S, L, D

✓ TV-14 ► Block All, V, S, L, D

✓ TV-MA ► Block All, V, S, L

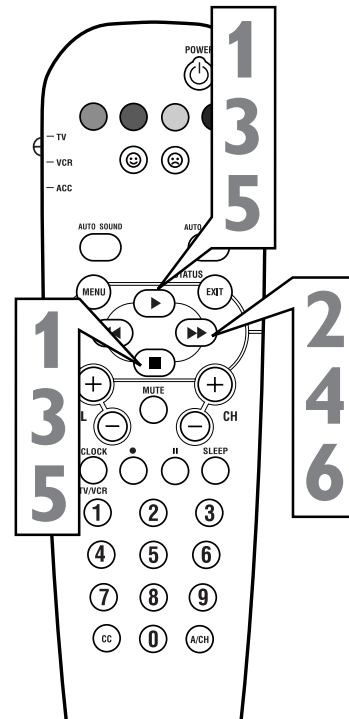




# 20

## OTHER AUTOLOCK™ BLOCKING OPTIONS

*AutoLock™ offers the viewer other blocking features as well. With these Blocking Options, the censoring can be turned ON or OFF.*

*Once you've entered your access code and the AutoLock™ features are displayed on the screen:*


 
**1** Press the **CURSOR UP**  or **DOWN**  buttons until the words **BLOCKING OPTIONS** are highlighted.



**2** Press the **CURSOR RIGHT**  button to display the **Blocking Options (BLOCKING, UNRATED, or NO RATING) menu**.


**BLOCKING:** Might be called the “master switch” for AutoLock™. When ON, ALL blocking/censoring will take place. When OFF, ALL blocking is disabled.

**UNRATED:** ALL unrated programs based on the Movie Ratings or Parental (TV) Guidelines can be blocked if this feature is set to ON and the **BLOCKING** feature is set to OFF.

**NO RATING:** ALL programming with NO content advisory data can be blocked if set to ON and the **BLOCKING** feature is set to OFF.

**3** Press the **CURSOR UP**  or **DOWN**  buttons to highlight the desired feature.


**4** When highlighted, each feature can be turned **ON** or **OFF** using the **CURSOR RIGHT**  or **LEFT**  buttons on the remote.

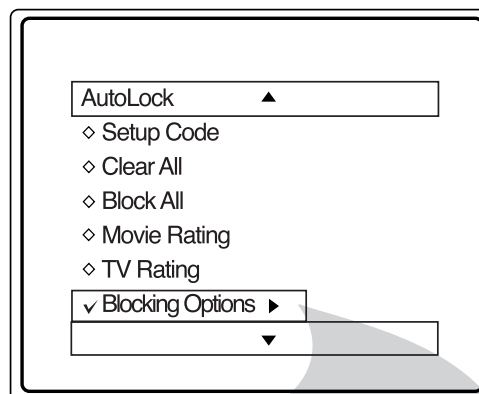

✓ Blocking On

✓ Unrated On

✓ No Rating On

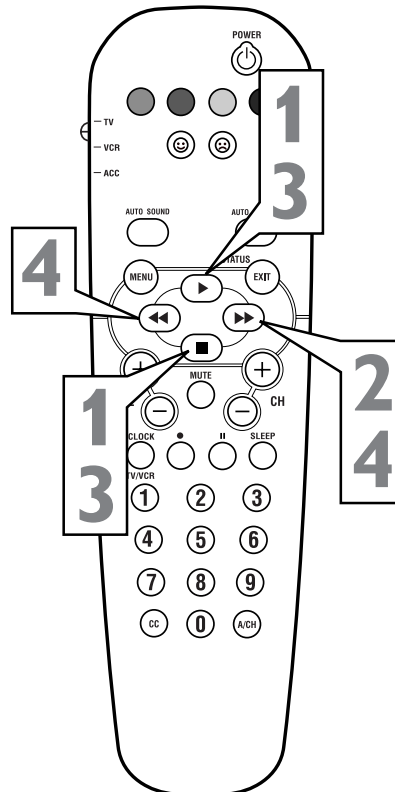


# 21

## USING THE CLOSED CAPTION CONTROL

**C**losed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

- 1** Press the **CC** button on the remote to display the current Closed Caption setting.
- 2** Press the **CC** button repeatedly to choose from the four Closed Caption options (CC Off, CC 1, CC 2, CC Mute).
- 3** When finished, press the **STATUS** /**EXIT** button to remove the menu from the TV's screen.

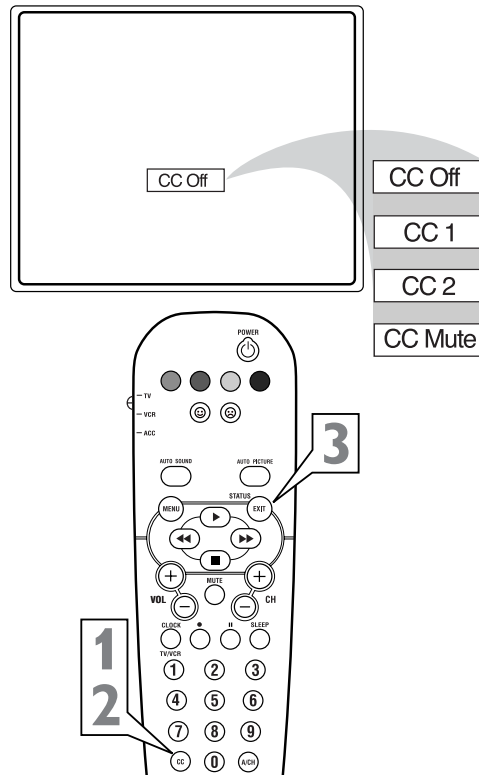


## USING THE SLEEPTIMER CONTROL

**Y**our TV can be set to automatically turn itself off at a given amount of time.

- 1** Press the **SLEEP** button on the remote control and the SLEEP timer display will appear on the screen.
- 2** Press the **SLEEP** button repeatedly to pick the amount of time (15, 30, 45, 60, 90, 120, 180, or 240 minutes) before the TV will turn itself off.

An on-screen count down will appear during the last minute before the TV shuts itself off. If any button is pressed during the last minute of the countdown, the Sleep timer setting will be cancelled.

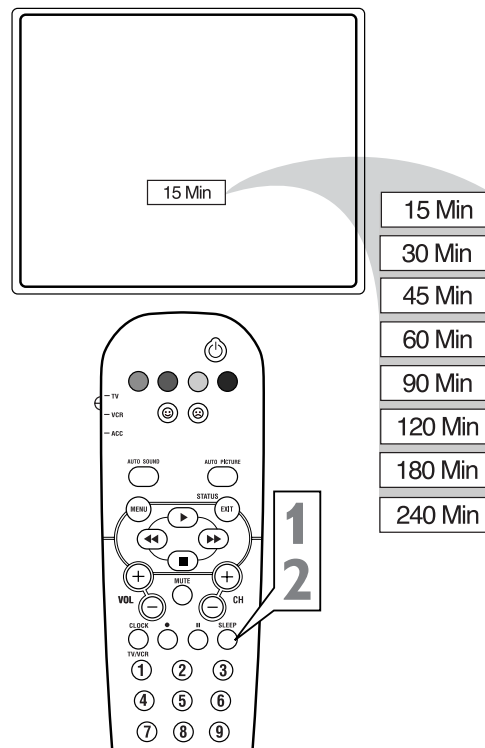



# 22



## USING THE AUTOPICTURE™ CONTROL

Whether you're watching a movie or a sporting event, your TV has automatic video control settings matched for your current program source or content.

**1** Press the **AUTO PICTURE** button on the remote control. The current Auto Picture setting will be displayed on the screen.

**2** Press the **AUTO PICTURE** button repeatedly to select either PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTI MEDIA picture settings.

**Note:** The way you choose to set the Picture Menu Controls will become your PERSONAL setting.

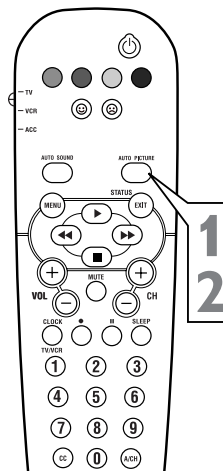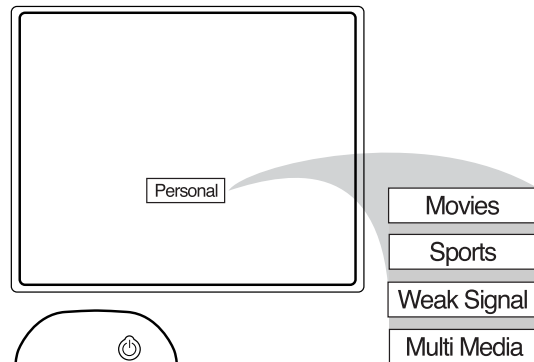

**MOVIES** - Preset picture options for watching Video Tapes, or DVDs.

**SPORTS** - Preset picture options for watching sporting events.

**WEAK SIGNAL** - Preset picture options for watching programs where the reception is not at its best.

**MULTI MEDIA** - Preset picture options for use with video gaming.



## USING THE AUTOSOUND™ CONTROL

The Auto Sound feature allows the listener to select between four different factory set sound options.

**1** Press the **AUTO SOUND** button on the remote control. The current Auto Sound setting will appear in the middle of the screen.

**2** Press the **AUTO SOUND** button repeatedly to toggle between the four settings. (PERSONAL, THEATRE, MUSIC, or VOICE)

**Note:** The way you choose to set the Sound Menu Controls will become your PERSONAL setting.

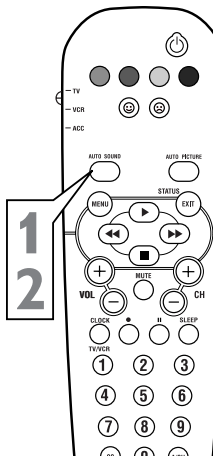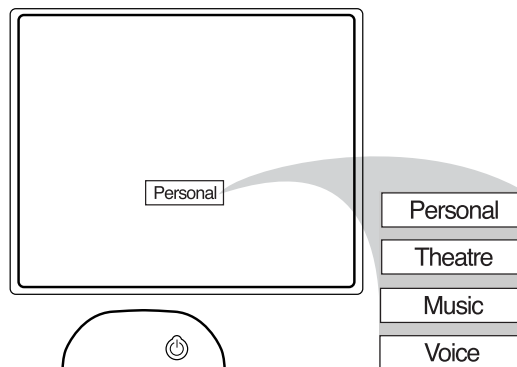

**THEATRE** - Preset sound options for watching movies.

**MUSIC** - Preset sound options for musical programming where there is little dialogue.

**VOICE** - Preset sound options for programming where heavy dialogue is present.

*The QuadraSurf™ control allows you set up four different personal channel Surf lists using the colored buttons (on the remote control), each holding up to ten channels in its quick viewing “list.”*


- 1 Press the CHANNEL (+) or (–) buttons (or the NUMBER buttons) to select a channel to add to one of the SURF lists.**
- 2 Press the SMILEY ☺ button on the remote control to ADD the channel to one of the SURF lists.**
- 3 Press the corresponding COLORED (Red, Green, Yellow or Blue) button to add the channel to that button’s Surf list. (Up to ten channels per button can be stored.)**

Repeat steps 1 through 3 to add additional channels (up to 10) to each of the the SURF lists.

**To remove a channel from one of the SURF lists;**

- 4 Press the COLORED Quadra Surf button until the desired channel appears. The screen will display the channel number with a colored “Smiley” face to indicate the Colored button it relates to.**
- 5 While the “Smiley” face channel indicator is displayed, press the FROWNIE ☹ face button. The screen will read, “Remove item? - Press ☹ .”**
- 6 Press the FROWNIE ☹ face button again to confirm your decision to remove the channel from the Surf list.**

Repeat steps 4-6 to remove other channels from Surf lists.

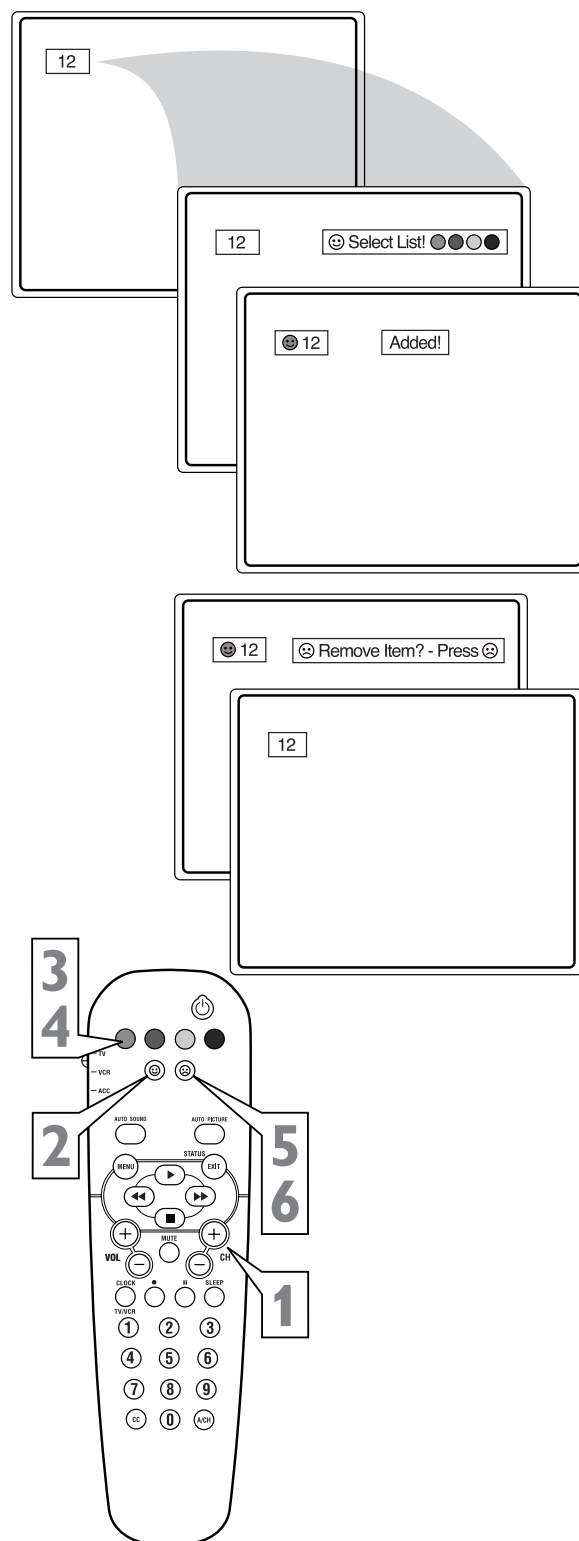

# 24

## HOW TO USE THE QUADRA SURF™ BUTTONS



*The Quadra Surf buttons on your remote control allow you to store up to 10 channels per button (40 total). You can even program the A/V Input channels (AV1, AV2, SVHS, FRONT, etc.) for each button making them a “source” button.*

*Assuming channels have now been added to the four Quadra Surf lists (the four colored buttons, see the previous page), let's review how the feature works.*

- 1** Press one of the pre-programmed **COLORED** buttons on the remote (Red, Green, Yellow or Blue). The screen will display a smiley face with the first programmed channel for that surf list.
- 2** While the colored “smiley” face still appears on the screen, press the same **COLORED** button on the remote to tune the second channel programmed for that specific surf list.
- 3** Repeatedly pressing the same **COLORED** button while the “smiley” face appears will tune all the programmed channels. Pressing the **COLORED** button again will return you to the first channel in the list.

If the “smiley” face disappears from the screen and the same **COLORED** button is pressed, the surf channels will be displayed starting with the **FIRST** programmed channel again.

- 4** Repeat steps 1-3 for the other three **COLORED** buttons (Surf lists) if desired.
- 5** Any time the “smiley” face appears with the channel number, **pressing the “frownie” face button** will allow you to remove it from the list (see the previous page for more details).

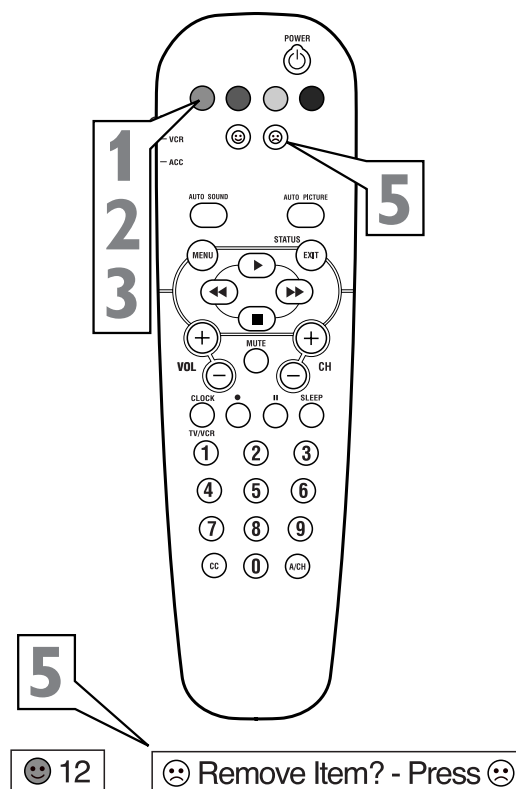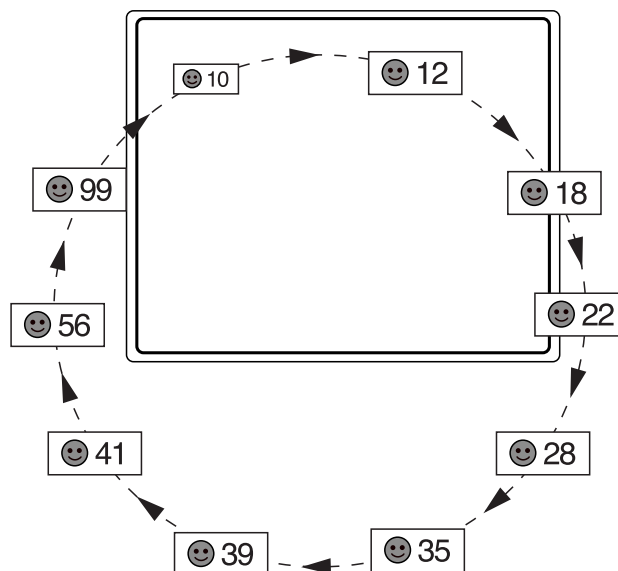

# 25

## REMOTE USE - CODE ENTRY FOR ACCESSORIES

*If your remote control will not operate your accessory devices, look up the three-digit code listed by your brand on panels 27-29.*

*Please read through steps 1-5 before beginning.*

- 1** Place the **TV/VCR/ACC Mode Switch** in the proper position.
- 2** Press the **VCR • RECORD** button on the remote control and release.
- 3** Press the **AUTO SOUND** button on the remote within 30 seconds, then release.
- 4** Enter the **THREE-DIGIT REMOTE CODE NUMBER** for your desired device. The remote is now ready to send commands to the unit.
- 5** Point the remote at the Device. Press the **POWER** button on the remote to turn the unit ON.


If this doesn't work the first time, repeat the steps using another remote code number.




VCR



Cable Box

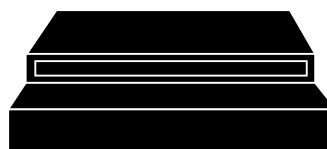

DBS or other Accessory Device


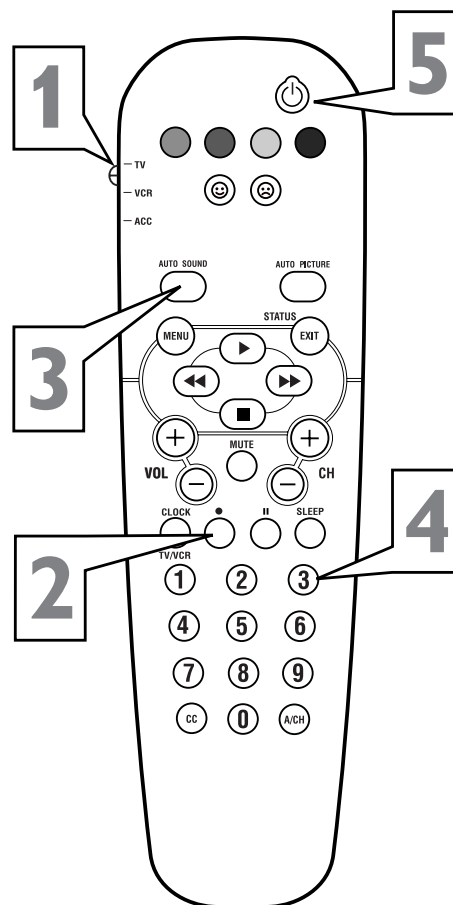


## 26 REMOTE USE - SEARCH METHOD FOR ACCESSORIES

*The Search Method of programming your remote can take as long as 12 minutes to perform so we recommend you use it as a last resort.*

*Please read all the steps below before beginning.*

- 1** Press the **POWER** button on the device you are attempting to program to turn it ON.
- 2** If programming a VCR or DVD type product that has a **STOP** play command, place a VCR Tape or DVD disc into the device. Press the **PLAY** button.
- 3** Place the **TV/VCR/ACC Mode Switch** in the proper position. VCR for programming Video Cassette Recorders or ACC for all other accessory devices.
- 4** Press the **VCR • RECORD** and the **AUTO SOUND** buttons simultaneously and hold them down.  
As you continue to hold down buttons, the remote will run through its programmed code list with a command for the VCR or DVD to **STOP** play. Or, for Cable Boxes and Satellite Receivers the command will be to **CHANGE CHANNELS**.
- 5** When the **STOP** command happens release the two buttons.  
Or for Cable Boxes and Satellite Receivers, as soon as the channel changes **ONCE, IMMEDIATELY** release the two buttons.

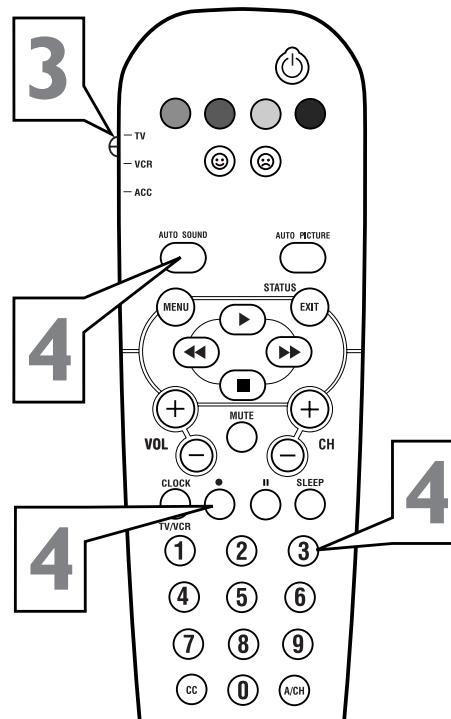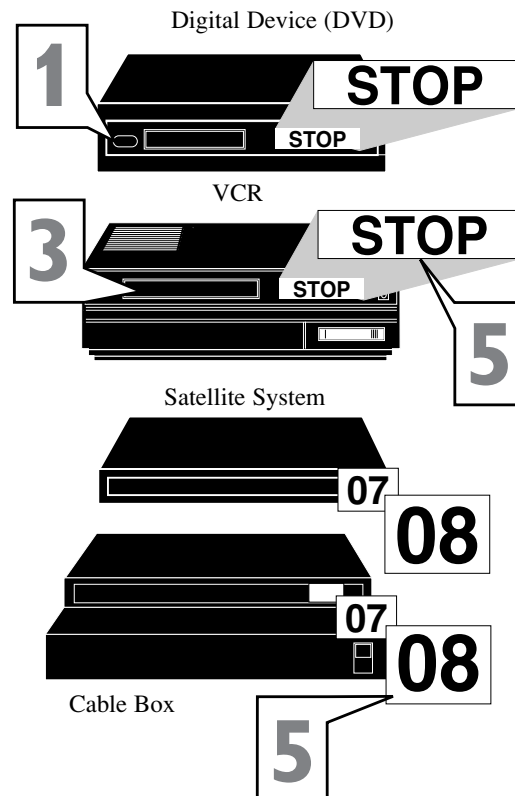

**CABLE BOX CODES**

ABC .....028, 030, 034, 035,  
 .....038, 040, 041, 044, 060  
 Allegro .....180, 342  
 Andover .....571  
 Antronix .....049, 234  
 Archer ....049, 066, 180, 234, 824  
 BBT .....294  
 Belcor .....083  
 Bell & Howell .....041  
 Birgmingham Cable  
 Communications .....303  
 British Telecom .....030, 132  
 Cable Star .....083  
 Cabletenna .....049  
 Cabletime .....188, 298, 404, 475  
 Cableview .....049  
 Century .....180  
 Citizen .....180, 342  
 Clyde .....113  
 Colour Voice .....052, 058  
 Comband .....259  
 Comtec .....301  
 Comtronics .....067, 087  
 Contec .....046  
 Cryptovision .....627  
 Decsat .....450  
 Digi .....664  
 Eastern .....029, 301  
 Emerson .....824  
 Everquest .....042, 067  
 Filmmnet .....470  
 Focus .....427  
 France Telecom .....478  
 GC Electronics .....083, 234  
 GE .....259  
 GEC .....113  
 Garrard .....180  
 Gemini .....042, 097, 269, 824  
 General Instrument 038, 303, 503  
 GoldStar .....067, 171  
 Goodmind .....824  
 Grundig .....556  
 Hamlin ....036, 047, 061, 286, 300  
 Hitachi .....038  
 Hytex .....034  
 Jasco .....042, 180, 342  
 Jerrold .....030, 038, 039, 041,  
 .....042, 051, 303, 503  
 Linsay .....467  
 MNet .....046, 470  
 Macom .....060  
 Magnavox .....054, 059  
 Memorex .....027  
 Movie Time .....090, 183  
 NSC .....090, 097, 183  
 Novaplex .....645  
 Oak .....034, 046  
 Optimus .....048  
 PVP Stereo Visual Matrix .....030  
 Panasonic .....027, 048, 134  
 Panther .....664  
 Paragon .....027  
 Philips .....052, 054, 058, 180,  
 .....269, 317  
 Pioneer .....050, 171, 560, 904

Popular Mechanics .....427  
 Prelude .....797  
 Pulsar .....027  
 Quasar .....027  
 RCA .....048  
 Radio Shack .....042, 342, 824  
 Realistic .....234  
 Recoton .....427  
 Regal .....047, 286, 300  
 Regency .....029  
 Rembrandt .....038, 097  
 Runco .....027  
 SL Marx .....067  
 STS .....183  
 Salora .....409  
 Samsung .....067, 171  
 Satbox .....402  
 Scientific Atlanta ....033, 035, 044,  
 .....304, 504, 904  
 Seam .....537  
 Signal .....042, 067  
 Signature .....038  
 Sprucer .....048  
 StarSight .....449, 569  
 Starcom .....030, 042  
 Stargate .....042, 067, 797, 824  
 Starquest .....042  
 Sylvania .....028  
 TFC .....337  
 TV86 .....090  
 Tadiran .....067  
 Tandy .....285  
 Tele+1 .....470  
 TeleCaption .....248  
 Teleservice .....308  
 Teleview .....067  
 Texscan .....028  
 Timeless .....301, 445  
 Tocom .....039, 040, 086  
 Toshiba .....027  
 Tudi .....313  
 Tusa .....042  
 Unika .....049, 180, 234  
 United Artists .....034  
 United Cable .....030  
 Universal .....049, 066, 083,  
 .....180, 218, 234  
 Viewstar .....054, 087, 090, 285  
 VisiCable+ .....508  
 Westminster .....132  
 Zenith .....027, 081, 552  
 Zentek .....427

**SATELLITE CODES**

AST .....378  
 Akai .....542  
 Alba .....389, 448, 482, 542, 640  
 Aldes .....315  
 AlphaStar .....799  
 Amstrad .....107, 279, 372, 488,  
 528, 536, 716  
 Ankaro .....247, 315, 396  
 Anttron .....210, 448  
 Armstrong .....270  
 Astra .....135  
 Astro .....200, 528

Avalon .....423  
 Axis .....396  
 BT .....542, 695  
 Beko .....216  
 Best .....396  
 Blaupunkt .....200  
 Boca .....270, 540  
 Bush .....094  
 Cambridge .....371, 542  
 Channel Master .....389  
 CommLink .....315  
 Connexions .....423  
 Conrad .....634  
 Crown .....270  
 Cyrus .....227  
 DDC .....389  
 DNT .....227, 423  
 Echostar .....423, 740, 802, 897  
 Emanon .....448  
 Expressvu .....802  
 Ferguson .....094, 210, 216, 363  
 Fidelity .....279  
 Finlux .....135, 371, 424, 482  
 Freecom .....448  
 Fuba .....396, 423, 448  
 G-Sat .....210  
 Galaxis .....315  
 General Instrument 388, 654, 896  
 Gooding .....598  
 Goodmans .....216  
 Grundig .....200, 216, 598, 777  
 HTS .....802  
 Hinari .....210  
 Hirschmann .....200, 423, 424,  
 .....528, 600  
 Hitachi .....482, 846  
 Houston .....695  
 Hughes Network Systems .....776  
 Huth .....247, 270, 315  
 IRTE .....636  
 ITT .....135  
 Intervision .....619  
 JVC .....542, 598, 802  
 Jerrold .....388, 654  
 Kathrein .....119, 200, 227, 469,  
 .....531, 649, 685  
 Kreiselmeier .....200  
 Kyostar .....448  
 La Sat .....540, 634  
 Lenco .....448  
 Lennox .....619  
 Lupus .....396  
 Luxor .....135, 600  
 Magnavox .....749, 751  
 Manhattan .....482, 619  
 Marantz .....227  
 Maspro .....119, 363, 777  
 Matsui .....371, 598  
 Mediamarkt .....270  
 Memorex .....751  
 Minerva .....598  
 Mintec .....605  
 Morgan's .....270, 540  
 Neuhäus .....247, 528  
 Next Level .....896  
 Nikko .....387, 740

Nokia	.135, 424, 482, 600	Akai	.068, 076, 080, 088, 133, 183, 269, 342	Finlandia	.108, 131, 137
Nordmende	.389	Akiba	.099	Finlux	.027, 069, 108, 131, 132
Orbitech	.528	Akura	.298	Firstline	.064, 070, 072, 099, 236
Oxford	.371	Alba	.047, 099, 236, 305, .022, 342, 379	Fisher	.073, 074, 081, 093, 131
Pace	.094, 210, 363, 482, 818	Ambassador	.047	Frontech	.047
Palladium	.598	America Action	.305	Fuji	.060, 062
Palsat	.528	American High	.062	Funai	.027
Panasonic	.728	Amstrad	.027, 305, 352, 359	GE	.062, 075, 087, 092, 229, 267
Panda	.482	Anitech	.099	GEC	.108
Patriot	.542	Asha	.267	Garrard	.027
Philips	.227, 319, 482, 598, 749, 751, 777	Asuka	.064	General	.047, 079
Phonotrend	.315, 619	Audiovox	.064	Go Video	.259, 306, 377, 459
Plasmatic	.469	Baird	.027, 068, 131, 134	GoldHand	.099
Primestar	.388, 654	Basic Line	.047, 099, 305	GoldStar	.045, 064, 065, 252, .498, 507
Promax	.482	Beaumark	.267	Goodmans	.027, 047, 064, 089, .099, 305, 430
Prosat	.315	Bell & Howell	.131	Gradiente	.027, 035, 435
Quadral	.389, 655	Blaupunkt	.030, 033, 061, 181, .189, 222, 253, 254, 430	Graetz	.068, 131, 267
RCA	.170, 419, 593, 882	Blue Sky	.305	Granada	.073, 108, 131
RFT	.227, 247, 315	Brandt	.214, 347, 348	Grandin	.027, 064, 099
Radio Shack	.896	Brandt Electronic	.068	Grundig	.030, 033, 034, 099, .108, 222, 234, 253, .280, 374, 376, 405, 430
Radiola	.227	Broksonic	.029, 148, 211, 236, .238, 322, 375, 388, 506	HCM	.099
Radix	.423	Bush	.099, 236, 305, 379	HI-Q	.074
SAT	.378, 488	CCE	.099, 305	Hanseatic	.064
SEG	.396, 448	CGE	.027	Harley Davidson	.027
SKY	.883	Calix	.064	Harman/Kardon	065, 102, 108, 173, 188
SM Electronic	.740	Canon	.062, 194	Harwood	.095, 099
Saba	.363	Capehart	.047	Headquarter	.073
Sabre	.482	Carver	.108, 173	Hinari	.031, 099, 235, 267, 379
Salora	.135	Catron	.047	Hitachi	.027, 031, 068, 069, 092, .109, 132, 193, 262, 267, 319
SatPartner	.448	Cimline	.099	Hughes Network Systems	.069
Satec	.210	Cineral	.305	Hypson	.099
Schwaiger	.210, 531	Citizen	.064, 305	ITT	.068, 073, 131, 133, 267, .295, 411
Seemann	.423, 605, 653	Clatronic	.047	ITV	.047, 064, 305
Siemens	.200	Colt	.099	Imperial	.027
Skymaster	.315, 655, 740	Combitech	.379	Ingersol	.031
Sony	.666, 731	Condor	.047	Interfunk	.108
Star Choice	.896	Craig	.064, 074, 099, 267, 298	JVC	.035, 068, 094, 233, .234, 411, 513
Star Trak	.448	Crown	.047, 099, 305	Jensen	.068
Strong	.448	Curtis Mathes	.062, 068, 087, 189	KEC	.064, 305
Sunstar	.540	Cybernex	.078, 267	KLH	.099
Tantec	.363, 482	Cyrus	.108	Kaisui	.099
TechniSat	.289, 528	Daewoo	.044, 047, 072, 114, 305	Kendo	.133, 236
Telefunken	.448	Dansai	.099	Kenwood	.065, 068, 094, 411
Teleka	.270, 640	Daytron	.047	Kodak	.062, 064
Thomson	.482	De Graaf	.069, 193	Korpel	.099
Tonna	.695	Decca	.027, 108	LXI	.064
Toshiba	.776, 817	Denon	.069	Lenco	.305
Triad	.378	Dual	.068	Leyco	.099
Triasat	.528	Dumont	.027, 108, 131, 132	Lloyd's	.027, 235
Uniden	.749, 751	Dynatech	.027	Loewe	.031, 033, 064, 108, 189
Universum	.200, 598	ESC	.267, 305	Logik	.031, 099, 267
VTech	.378	Elbe	.065	Luxor	.070, 073, 075, .089, 131, 133
Ventana	.227	Elcatech	.099	M Electronic	.027, 065
Vortec	.448	Electrohome	.064	MEI	.062
Wisi	.200, 378, 423, 482	Electrophonic	.064	MGA	.070, 088, 267
Zenith	.883	Elin	.078	MGN Technology	.267
		Emerex	.059	MTC	.027, 267
		Emerson	.027, 029, 063, 064, .070, 088, 095, 115, 148, .211, 235, 236, 238, 239, .305, 321, 322, 388, 506	Magnasonic	.305
		Ferguson	.068, 134, 347, 348		
		Fidelity	.027		

**VCR CODES**

ASA	.064, 108
Action	.344
Admiral	.075, 236
Advantz	.383
Adventura	.027
Aiko	.305
Aiwa	.027, 064, 334, 375, .379, 433, 463, 495

Magnavox	.027, 062, 066, 108, 130, 137, 176	Protec	.099	TMK	.063, 235, 267
Magnin	.267	Pulsar	.066, 078	Tashiko	.027
Manesth	.072, 099	Pye	.108	Tatung	.027, 068, 108
Marantz	.030, 033, 062, 089, 108, 173, 188, 322	Quarter	.073	Teac	.027, 068
Marta	.064	Quartz	.073, 182	Tec	.047
Matsui	.031, 063, 115, 235, 236, 322, 375, 379	Quasar	.062, 104, 189	Technics	.062, 189, 253, 273
Matsushita	.062, 189	Quelle	.108	Teknika	.027, 062, 064, 079
Memorex	.027, 062, 064, 066, .073, 074, 075, 131, 189, 236, .267, 295, 326, 334, 375, 506	RCA	.062, 069, 075, 087, .092, 104, 132, 133, .176, 229, 267, 304, 480	Teleavia	.068
Memphis	.099	RFT	.430	Telefunken	.068, 214, 347, 348, 411
Metz	.030, 033, 064, 189, 222, 254, 374	Radio Shack	.027	Tenosal	.099
Minerva	.033, 222	Radiola	.108	Tensai	.027, 349
Minolta	.069, 132	Radiux	.064	Thomas	.027
Mitsubishi	.070, 075, 088, 094, .102, 108, 200, 241, 269, 470	Randex	.064	Thomson	.068, 347, 411
Motorola	.062, 075	Realistic	.027, 062, 064, 073, .074, 075, 089, 093, 131	Thorn	.063, 068, 131
Multitech	.027, 099	Rex	.068, 411	Toshiba	.068, 070, 072, 084, 093, .108, 237, 239, 393, 404, 411
Murphy	.027	Ricoh	.061, 280	Totevision	.064, 267
NAD	.085	Roadstar	.064, 099, 267, 305	Towada	.349
NEC	.065, 067, 068, 077, .094, 109, 131, 484	Runco	.066	Triumph	.235
Neckermann	.108	SBR	.108, 173	Uher	.267
Nesco	.099	SEG	.267, 349	Ultravox	.076
Nikkai	.383	SEI	.031, 108	Unitech	.267
Nikko	.064	STS	.069	Universum	.027, 033, 064, 076, 108, .133, 222, 267, 326, 352
Nikon	.061, 280	Saba	.068, 233, 234, 324, .347, 348, 411	Vector	.072
Noblex	.267	Saisho	.031, 063, 115, 235, 236	Vector Research	.065, 067
Nokia	.068, 073, 131, 133, 267	Salora	.070, 073, 102, 133, 470	Video Concepts	.067, 072, 088, 248
Nordmende	.068, 324, 347, .348, 411	Samsung	.072, 078, 080, .267, 459	Videosonic	.267
Oceanic	.027, 068	Sanky	.066, 075	Wards	.027, 062, 069, 074, 075, 087, .089, 099, 108, 176, 188, 239, 267
Okano	.342, 375	Sansui	.027, 068, 094, 109, .236, 298, 506	White Westinghouse	.099, 236, 305
Olympus	.062, 253	Sanyo	.073, 074, 131, 267, .295, 399	XR-1000	.027, 062, 099
Optimus	.064, 075, 085, .131, 189, 459	Saville	.379	Yamaha	.065
Optonica	.089	Schaub Lorenz	.027, 068, 131	Yamishi	.099
Orion	.029, 031, 063, 115, .148, 211, 235, 236, .322, 375, 379, 506	Schneider	.027, 099, 108, 137	Yokan	.099
Osaki	.027, 064, 099	Scott	.070, 072, 148, 211, .237, 238, 239	Yoko	.047, 267
Otto Versand	.108	Sears	.027, 062, 064, 069, 073, .074, 081, 084, 093, 131, 132	Zenith	.027, 060, 061, 066, 236, 506
Palladium	.033, 064, 068, 099	Seleco	.068		
Panasonic	.062, 104, 189, 252, .253, 254, 273, 405	Semp	.072		
Pathe Cinema	.063	Sentra	.047		
Pathe Marconi	.068	Sharp	.075, 089		
Penney	.062, 064, 065, 067, .069, 081, 267	Shintom	.099, 131		
Pentax	.069, 092, 132	Shogun	.078, 267		
Perdio	.027	Shorai	.031		
Philco	.062, 065, 236, 506	Siemens	.030, 033, 064, 081, .108, 131, 173, 222, 295		
Philips	.062, 089, 108, .137, 173, 411, 430	Silva	.064		
Phonola	.108	Singer	.072, 099		
Pilot	.064	Sinudyne	.031, 108		
Pioneer	.085, 094, 108, 195, 262	Solavox	.047		
Polk Audio	.108, 173	Sonolor	.073, 089		
Portland	.047	Sontec	.064		
Profex	.349	Sony	.027, 038, 049, 059, .060, 061, 062, 280, 302		
Profitronic	.267	Sunkai	.375		
Proline	.027	Sunpak	.280		
Proscan	.087, 229	Sunstar	.027		
		Suntronic	.027		
		Sylvania	.027, 062, 070, .108, 130, 137		
		Symphonic	.027		

## DIGITAL VIDEO DISC CODES

Denon	.517, 661
GE	.549
Harman/Kardon	.609
JVC	.585, 650
Kenwood	.517, 561
Magnavox	.530
Marantz	.566
Mitsubishi	.548
Onkyo	.530, 909
Optimus	.907
Panasonic	.517, 659
Philips	.530, 566
Pioneer	.905, 907, 659
Proscan	.549
RCA	.549
Samsung	.908
Sharp	.657
Sherwood	.660
Sony	.906
Technics	.517
Theta Digital	.907
Toshiba	.530
Yamaha	.517, 572
Zenith	.530, 618





**NOTE:** If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

**NOTA:** Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

**NOTA:** Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

**In Canada:** How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product. Please contact Philips at: 1-800-661-6162 (French speaking)  
1-800-363-7278 (English or Spanish speaking)

**Au Canada:** Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile.  
Veuillez contacter philips à: 1-800-661-6162 (Francophone)  
1-800-363-7278 (Anglais ou Espagnol)

**En el Canadá:** Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio. Favor de comunicarse con Philips al: 1-800-661-6162 (francófono)  
1-800-363-7278 (Inglés o Español)

**QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE.**

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

**ATLANTA**

Philips Factory Service  
550 Franklin Road.,  
Suite F  
Marietta, GA 30067  
800-273-1501

**TAMPA**

Philips Factory Service  
1911 US Highway 301  
North  
Tampa, FL 33619  
800-442-2027

**SAN FRANCISCO**

Philips Factory Service  
681 East Brokaw Rd.  
San Jose, CA 95112  
800-300-9013

**HOUSTON**

Philips Factory Service  
1110 N. Post Oak Rd.,  
Suite 100  
Houston, TX 77055  
800-952-3254

**CLEVELAND**

Philips Factory Service  
950 Keynote Circle  
Brooklyn Heights, OH  
44131  
800-331-7037

**DETROIT**

Philips Factory Service  
25173 Dequindre  
Madison Heights, MI  
48071  
800-438-1398

**DALLAS**

Philips Factory Service  
415 N. Main Street,  
#107  
Euless, TX 76040  
800-952-3254

**CHICAGO**

Philips Factory Service  
1279 W. Hamilton Pkwy.  
Itasca, IL 60143  
800-531-2922

**KNOXVILLE**

Philips Factory Service  
6700 D Papermill Rd.  
Knoxville, TN 37919  
800-821-1767

**PHILADELPHIA**

Philips Factory Service  
352 Dunks Ferry Rd.  
Bensalem, PA 19020  
800-847-9320

**COLOR TELEVISION** - 90 Days Free Labor, One Year Free Replacement of Parts  
(Two Years Free Replacement on Color Picture Tube) Must be carried in for service.

#### WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

#### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

#### WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

#### WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does

not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

#### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

#### BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

#### TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

#### WARRANTY COVERAGE IN CANADA...

Note: Product Warranty coverage may vary between countries where product is distributed by Philips Consumer Electronics Company. In order to receive full and specific warranty details for products sold and serviced in Canada, please contact Philips at:

**1-800-661-6162** (French Speaking)

**1-800-531-0039** (English and Spanish Speaking)

#### REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

---

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

---

**Philips, P.O. Box 520890  
Miami, FL 33152  
(402) 536-4171**

## PANEL LAYOUT

### Side 1

Panel Sequence and Panel Index	COVER	MODEL REGISTRATION INFORMATION	SAFETY INFO	PANEL 1	PANEL 2
PANEL 3	PANEL 4	PANEL 5	PANEL 6	PANEL 7	PANEL 8
PANEL 9	PANEL 10	PANEL 11	PANEL 12	PANEL 13	PANEL 14

### Side 2

PANEL 15	PANEL 16	PANEL 17	PANEL 18	PANEL 19	PANEL 20
PANEL 21	PANEL 22	PANEL 23	PANEL 24	PANEL 25	PANEL 26
PANEL 27	PANEL 28	PANEL 29	PANEL 30	PANEL 31	PANEL 32

## PANEL INDEX

Subject	Panel No.	Subject	Panel No.
Antenna Basic Connection .....	1	Basic Remote Operation .....	2
Audio/Video Connections		Basic Television Operation .....	2
AV1 Input Jacks .....	3	Cable Basic Connection .....	1
External Audio System .....	6	Closed Caption Control .....	21
Front Audio/Video Input Jacks .....	4	Factory Service Locations .....	30-31
Headphone Jack .....	4	Install Menu Controls .....	10
Monitor Output Jacks .....	6	Limited Warranty .....	32
S-Video Input Jacks .....	5	Onscreen Menu Navigation .....	9
AutoLock™ Controls		Picture Menu Controls .....	11
Access Code .....	15	QuadraSurf™ .....	23-24
Block All Channels .....	17	Remote Batteries .....	2
Block Channels .....	16	Remote Control Button Descriptions ..	7-8
Clear All Blocked Channels .....	17	Remote Control Programming	
Movie Ratings .....	18	Code Entry Method .....	25
Other Blocking Options .....	20	Remote Control Code List .....	27-29
TV Ratings .....	19	Search Method .....	26
Understanding AutoLock™ .....	14	Sleeptimer .....	21
AutoPicture™ Control .....	22	Sound Menu Controls .....	12
AutoSound™ Control .....	22	Timer Menu Controls .....	13